

KOALA




L I V I N G

Assembly Instruction


Product Name: Sierra Dark Wood Console Table - Wooden Top

Product Id: 129694

   
Hardware List

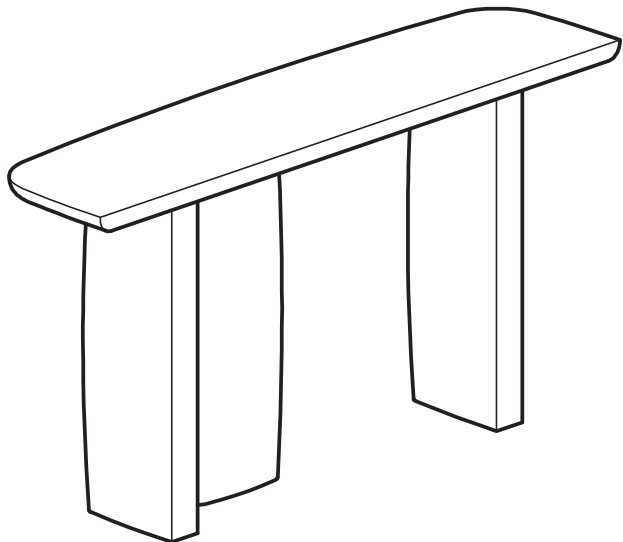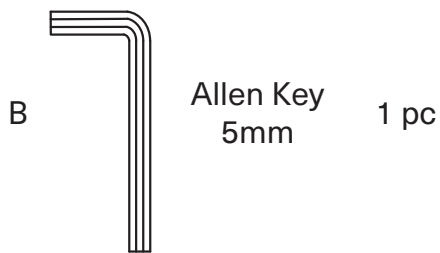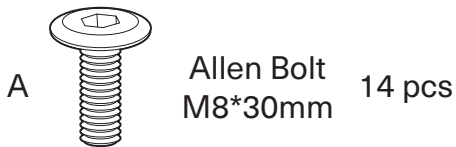

Part List

 

 
(C)
1 pc



(D)
2 pcs



 
(E)
1 pc

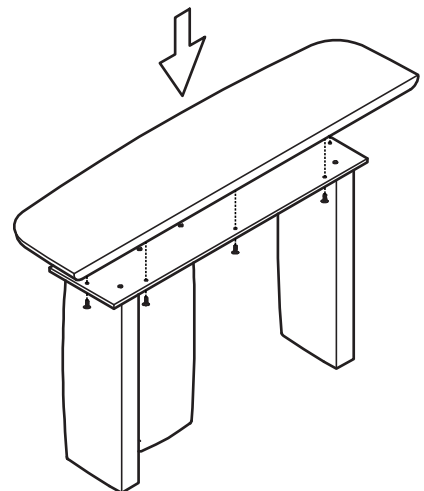



Note

1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.


 
1

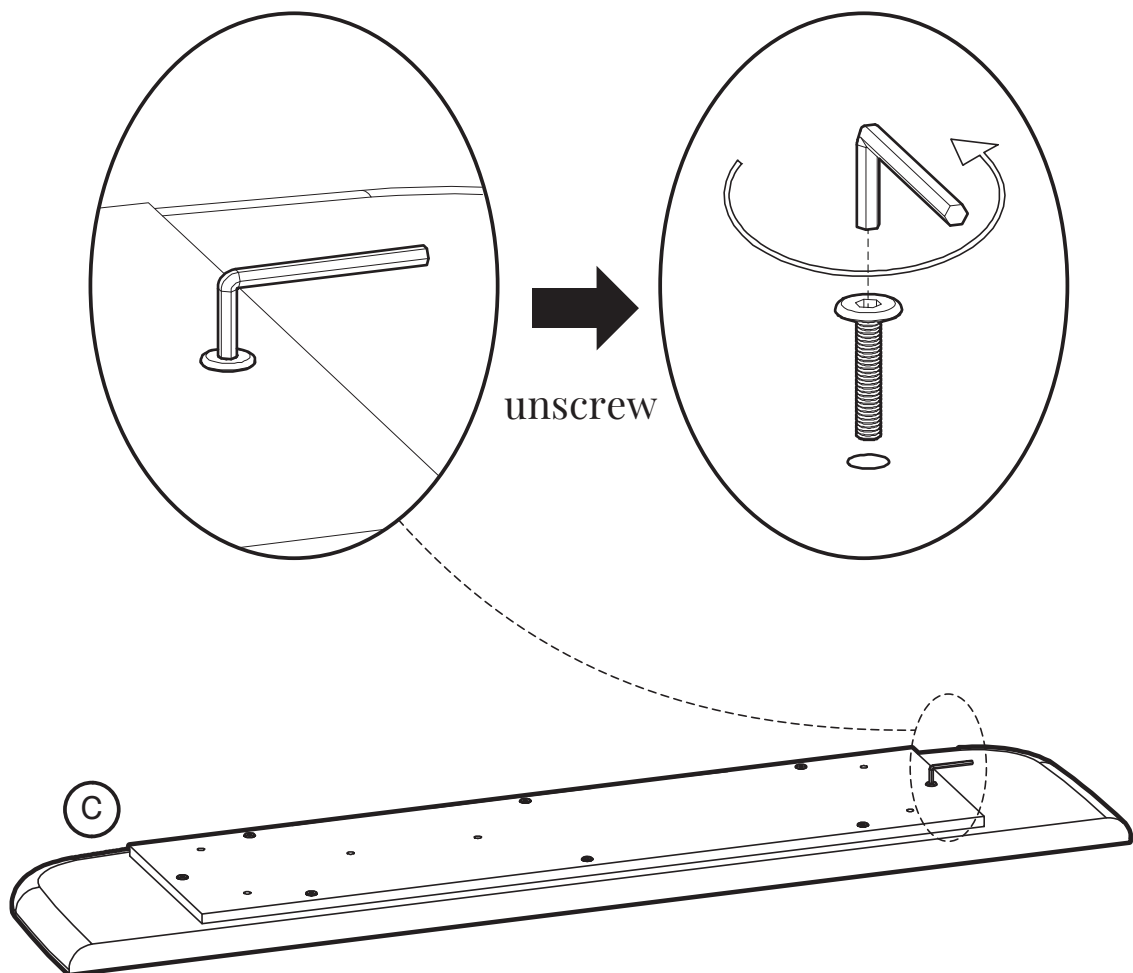


2

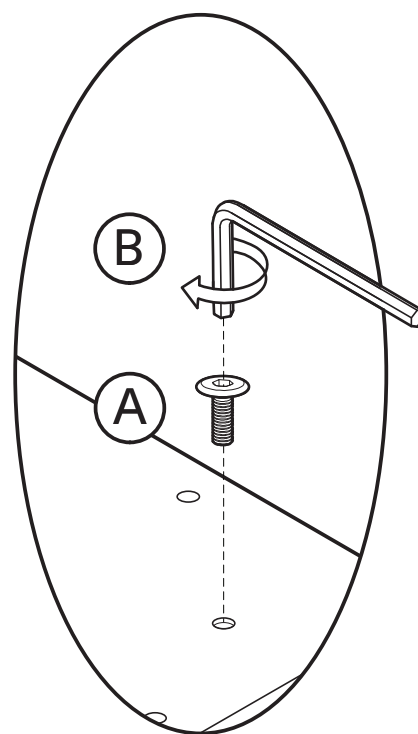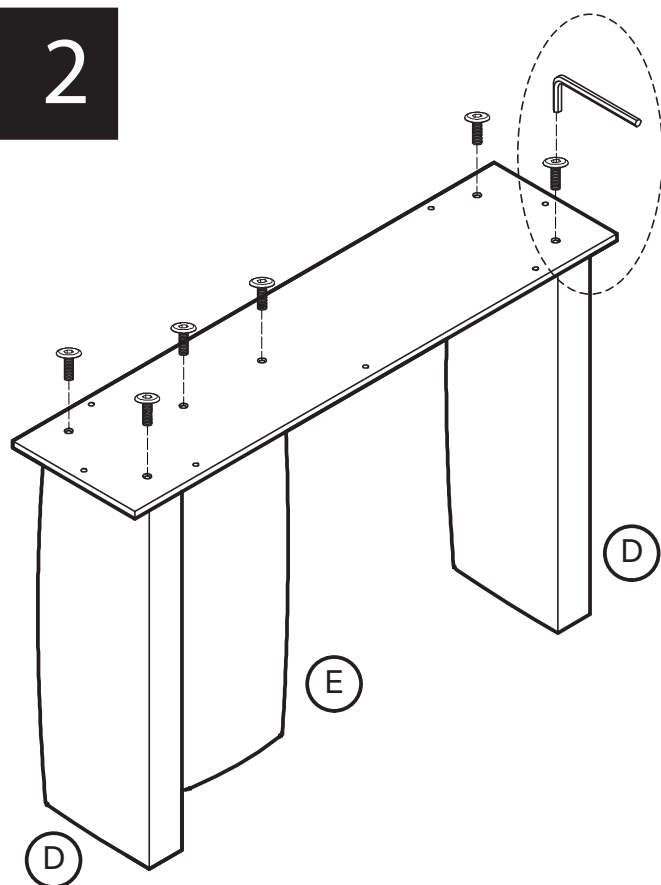  

3

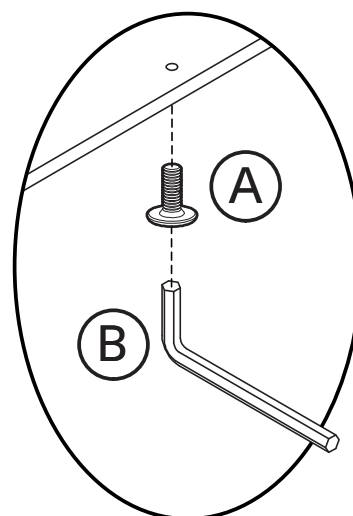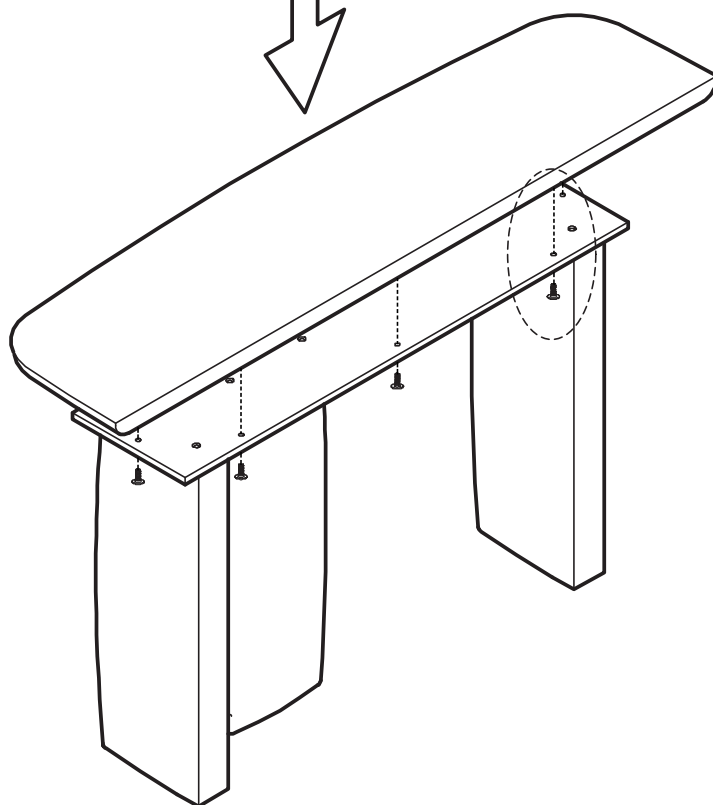  


4

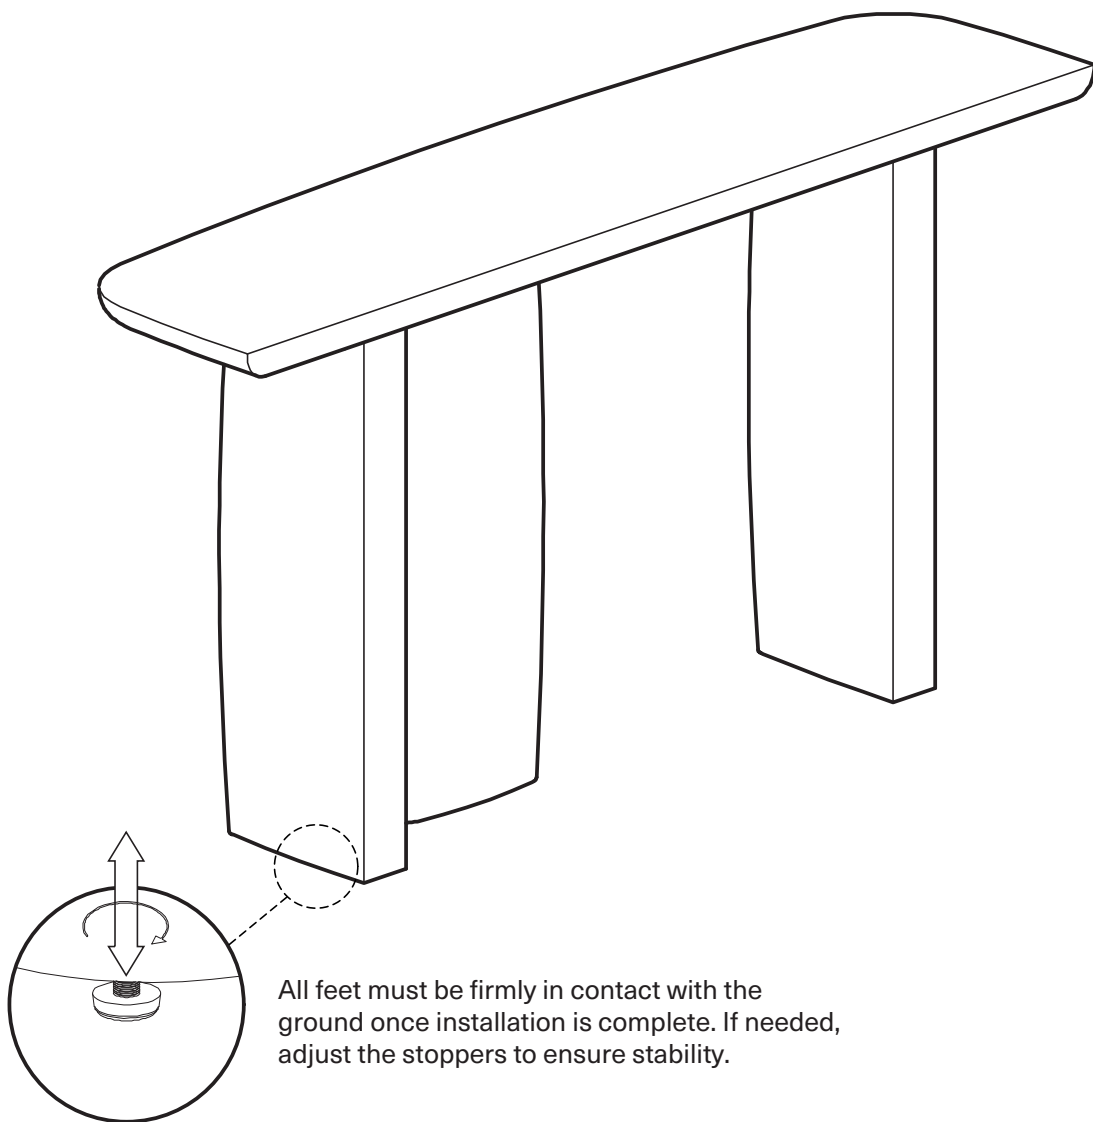 



⚠ Warning

 - ALWAYS secure this furniture with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves
- ALWAYS secure your television with an anchor device

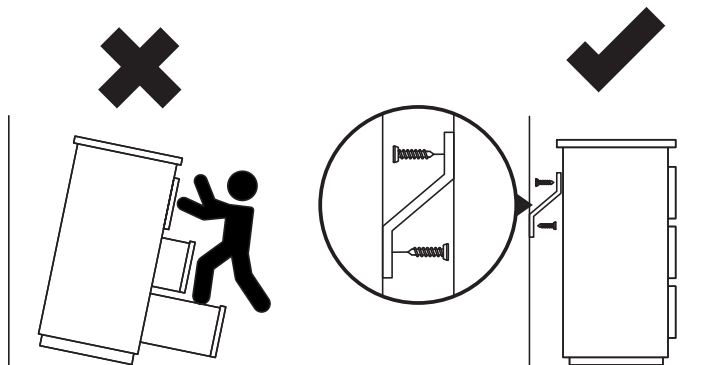

Anti-Tip Fixing Kit Assembly Instruction

A		Allen plastic button M8*40mm	4 pcs
B		Allen Rubber base 43*20mm	4 pcs
C		Allen releasable tie L500mm	2 pcs
D		Allen set screws M4*16mm	8 pcs +2 spare

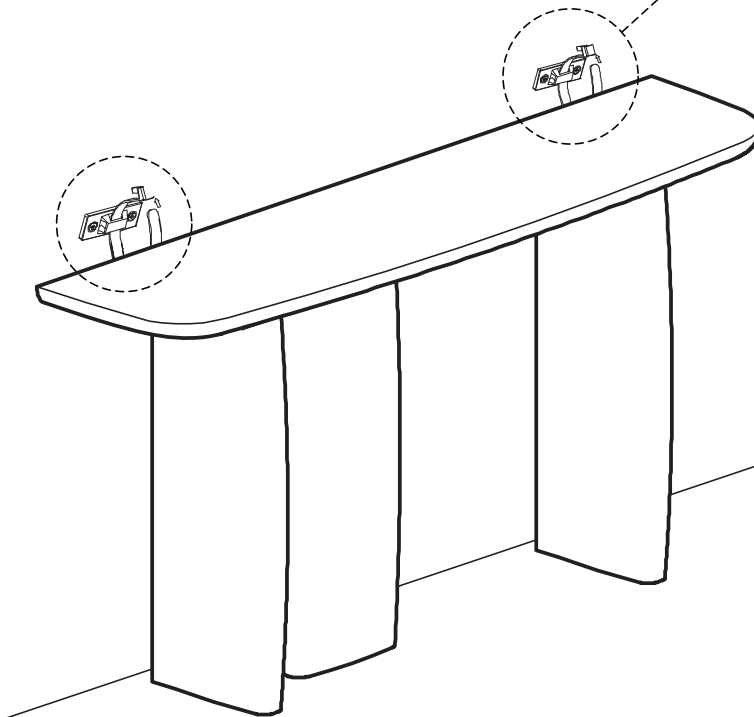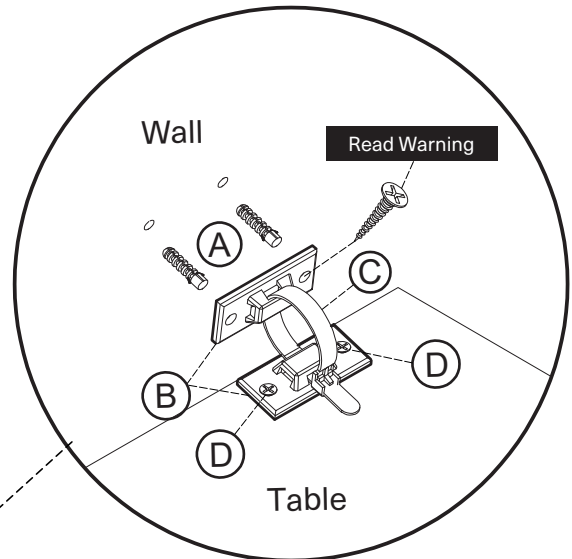  

⚠ Warning – Important!

The screws provided are only intended for attaching the anti-topple bracket to the product. Screws for securing the product to the wall are not included. Please ensure you use the correct type of screws suitable for your wall. If you are unsure, consult your local hardware store for advice.