

KOALA





L I V I N G

Assembly Instruction

Product Name: Thames Calacatta Oro - White Sintered Stone Entertainment Unit






Product Id: 129055

Hardware List

- | | | | |
|---|---|-------------------------|-------|
| A |  | Allen Key
5mm | 1 pc |
| B |  | Allen Bolt
M8*10 | 6 pcs |
| C |  | Allen Bolt
M8*25 | 4 pcs |
| D |  | Threaded Bolt
M8*340 | 4 pcs |



 
Part List

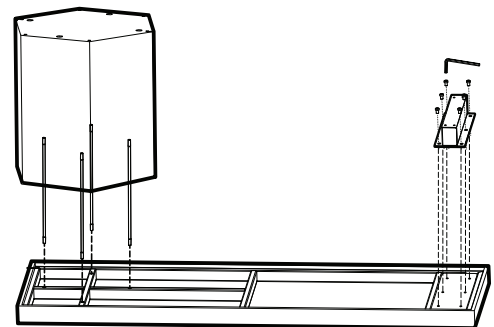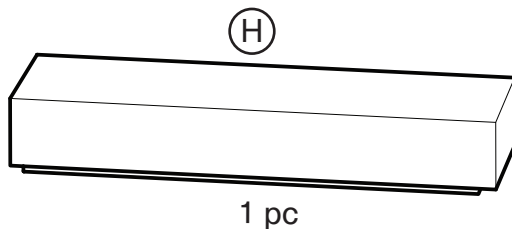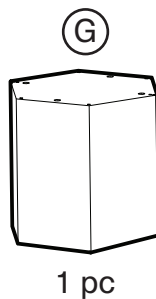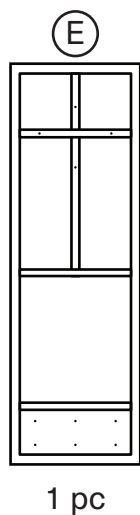

Note


1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.

1

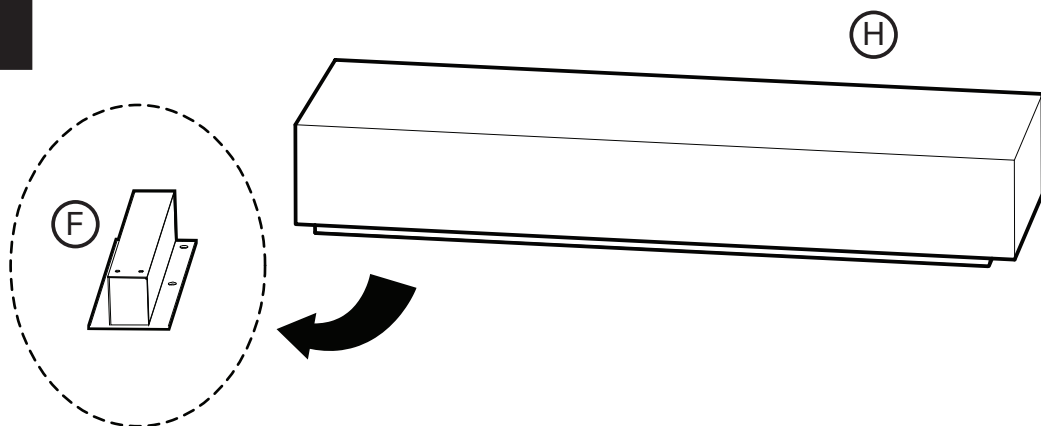


Metal bracket (F) is pre-attached here in the packaging.
Remove it before installation


2

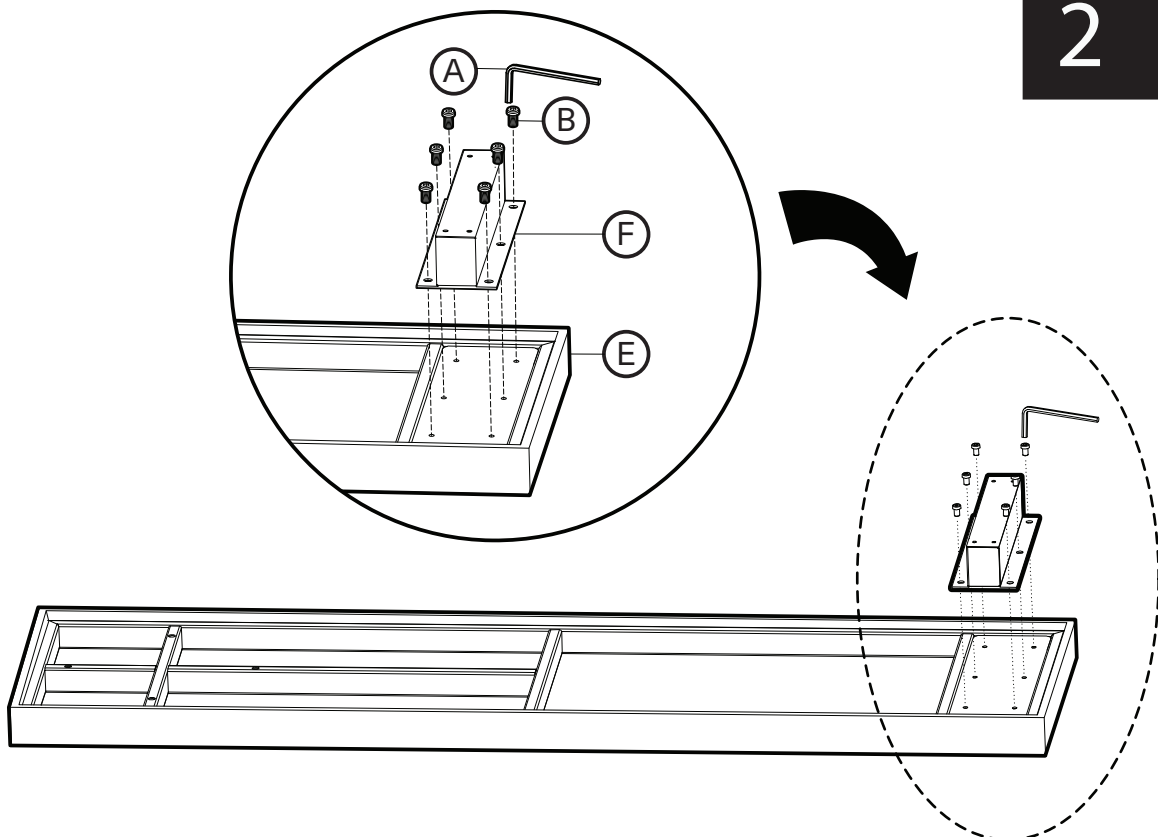


3

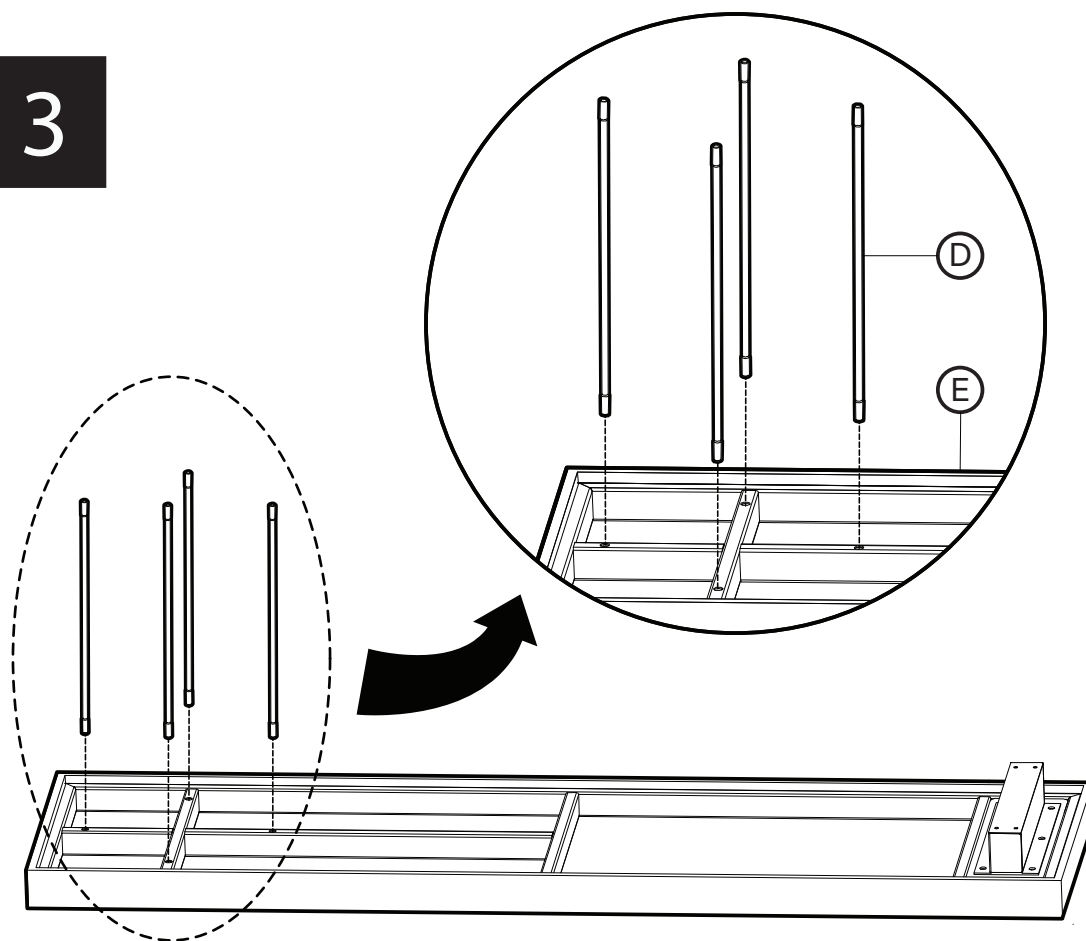


4

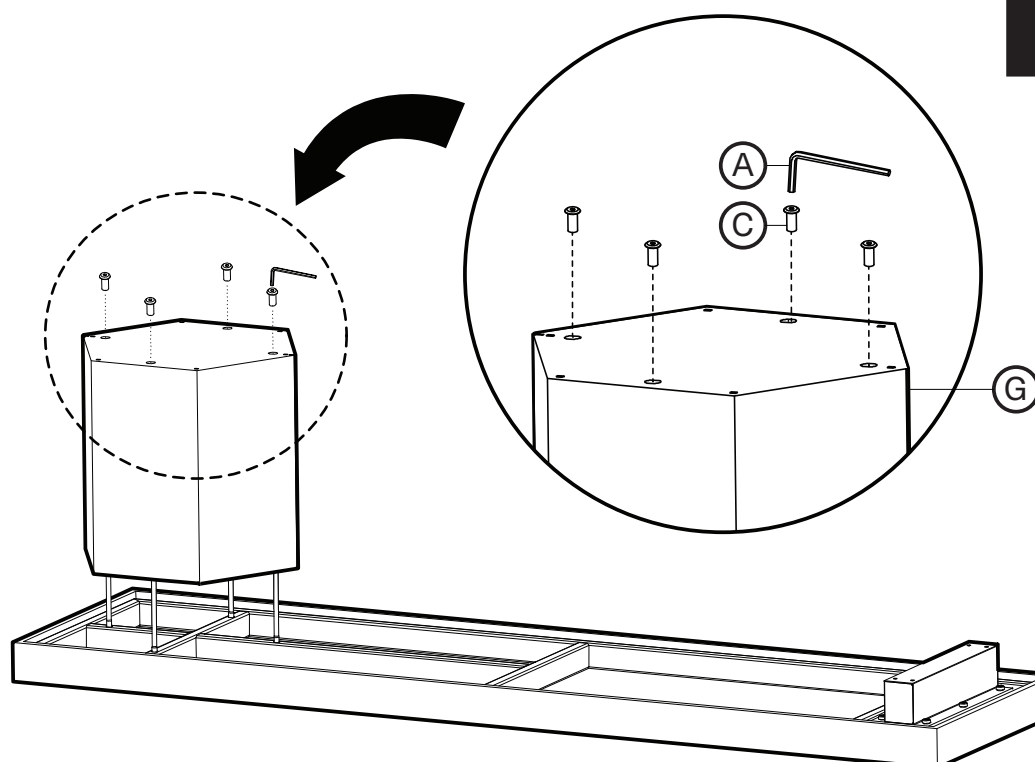

5

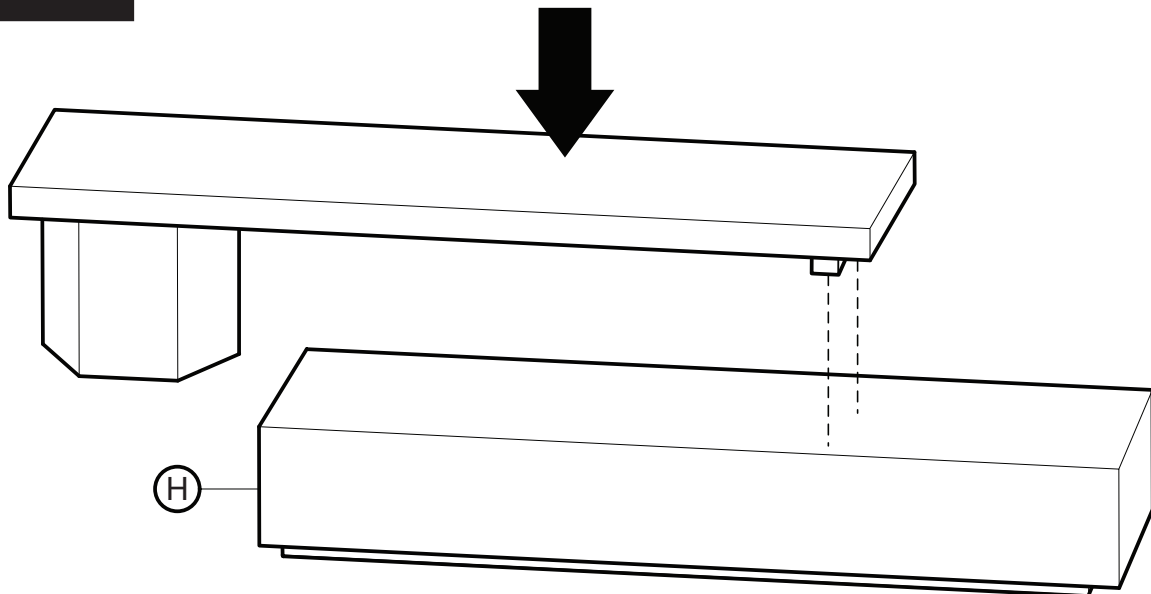

6

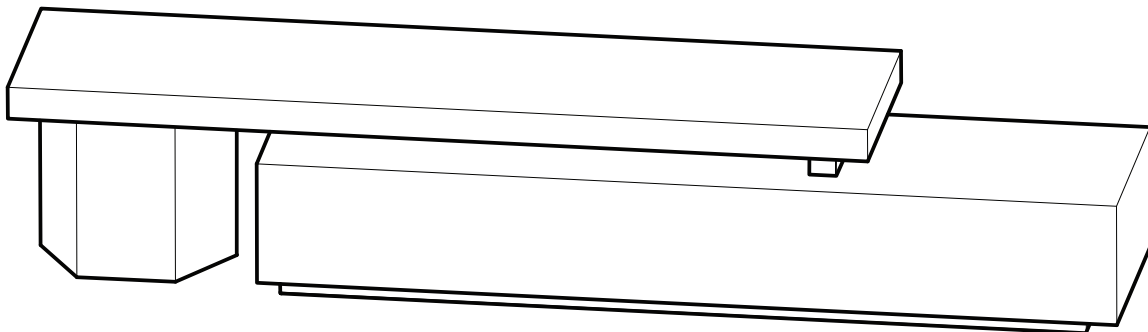

⚠ Warning

1. Never allow children to stand, climb or hang on drawers, doors, or shelves
2. ALWAYS secure your television with an anchor device

