


## **Assembly Instruction**


Product Name: San Pierre Light Brown Ash Veneer Dining Table

Single Leg - Travertine Finish Sintered Stone Top 200x110cm

Product Id: 129468

Hardware List			
A		Allen Key 5mm	1 pc
В		Allen Bolt M8*40	8 pcs
С	$\bigcirc$	Washer 8*19	8 pcs
D		Allen Key 4mm	1 pc
Е		Allen Bolt M6*25	10 pcs
F	$\bigcirc$	Washer 6*16	10 pcs

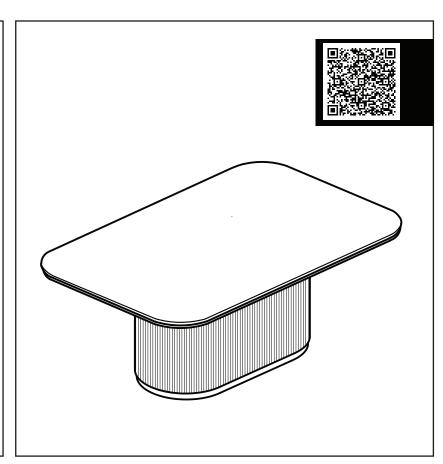

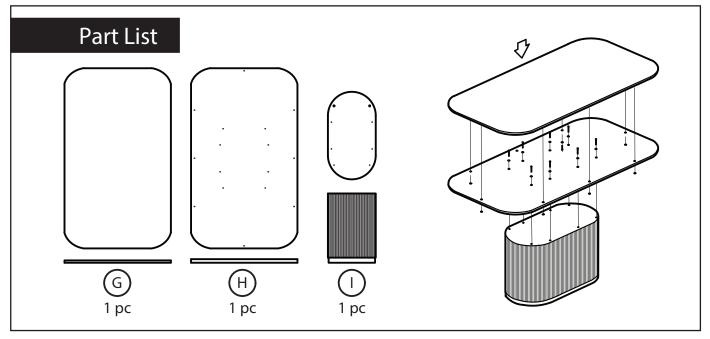

## Note

- 1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
- 2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
- 3. Keep all packaging materials intact until assembly is complete.
- 4. Before assembling the item, carefully read all provided instructions.
- 5. Handle tools with care during assembly to prevent injuries.

