

# KOALA




## L I V I N G


### Assembly Instruction

Product Name: San Pierre Light Brown Ash Veneer Sideboard  
Travertine Finish Sintered Stone Top

Product Id: 129292

#### Hardware List


- A  Allen Key 4mm 1 pc
- B  Allen Bolt M6\*35 8 pcs
- C  Washer 6\*13 8 pcs

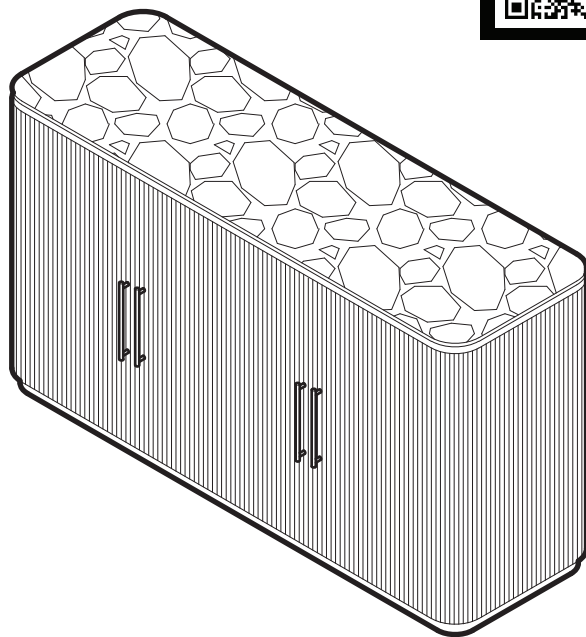

#### Part List



Top  
1 pc

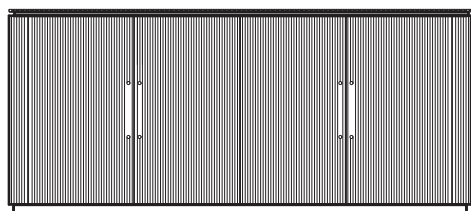


Sideboard  
1 pc



D - 4 pcs




E - 8 pcs

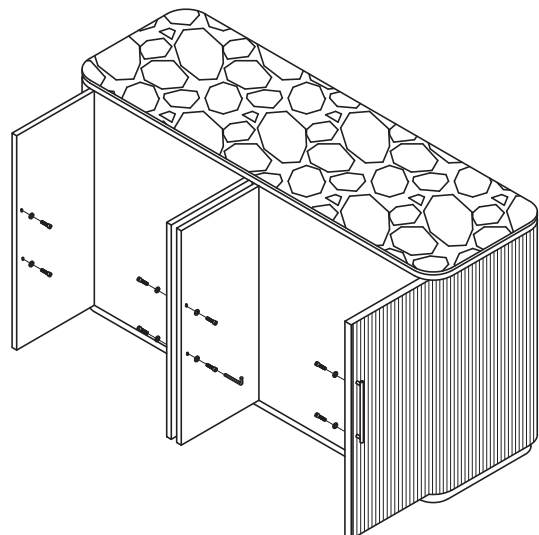


## Note

1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.

1

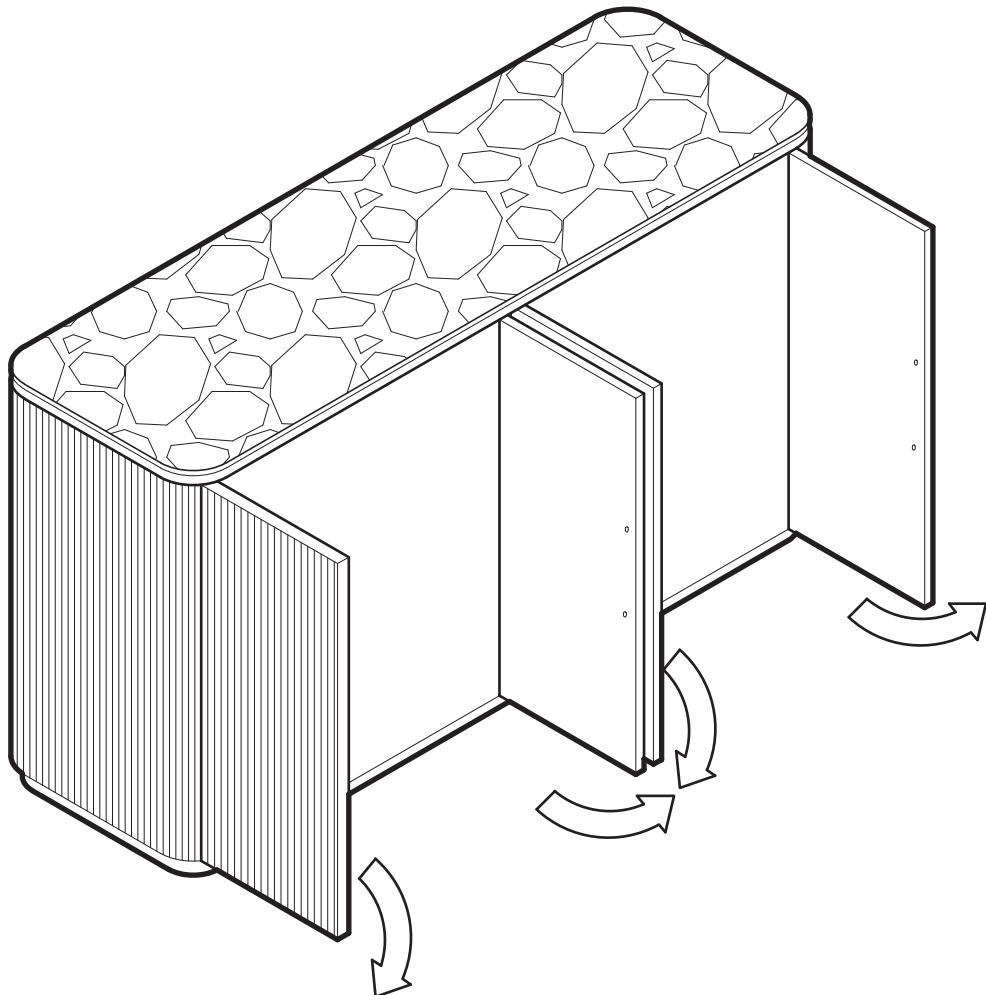

2

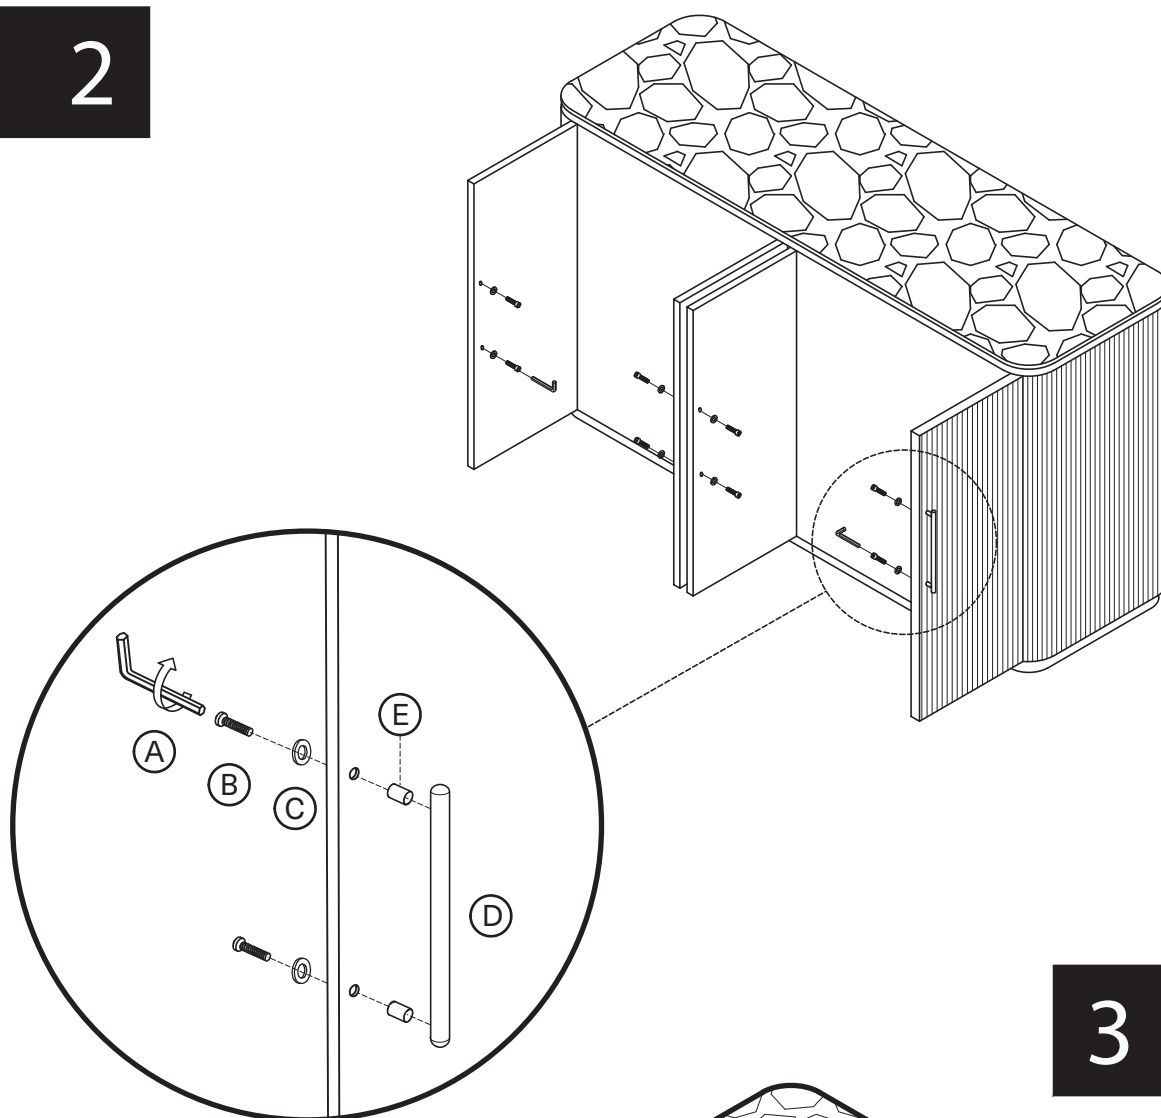

3

