

KOALA





L I V I N G

Assembly Instruction

Product: Riviera Isabelline White Fabric Queen Bed

Product Id: 130117

Hardware List


- | | | | |
|---|---|---------------------------|--------|
| A |  | Allen Wrench
5X66X23mm | 1 pc |
| B |  | Allen Bolt
M8X35mm | 32 pcs |
| C |  | Allen Bolt
M8X50mm | 2 pcs |
| D |  | Nut | 2 pcs |

Note


The bolts (B) are pre-installed on the bed head, side rails, footboard and bolts (C) is on the support legs. Please unscrew them to assemble the bed.



Part List

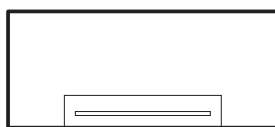


Headboard
1 pc

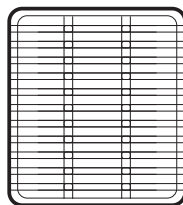

Bedstead
1 pc




Side Rail
2 pcs

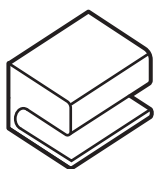

Nightstand
2 pcs




Footboard
1 pc




Middle Leg
1 pc



Bracket
4 pcs




Triangular
Bracket
4 pcs

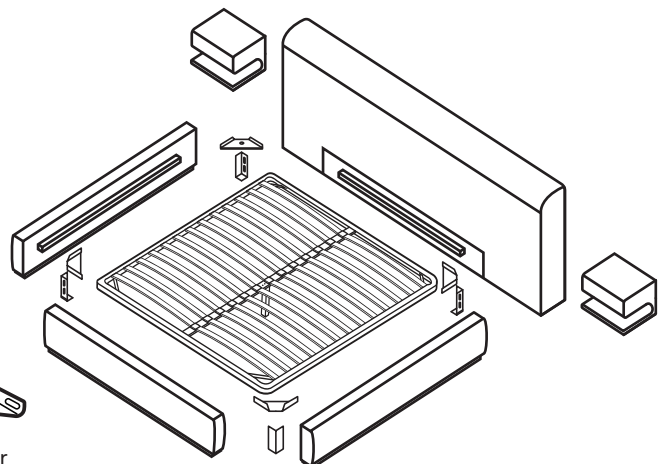


Note

1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.


1

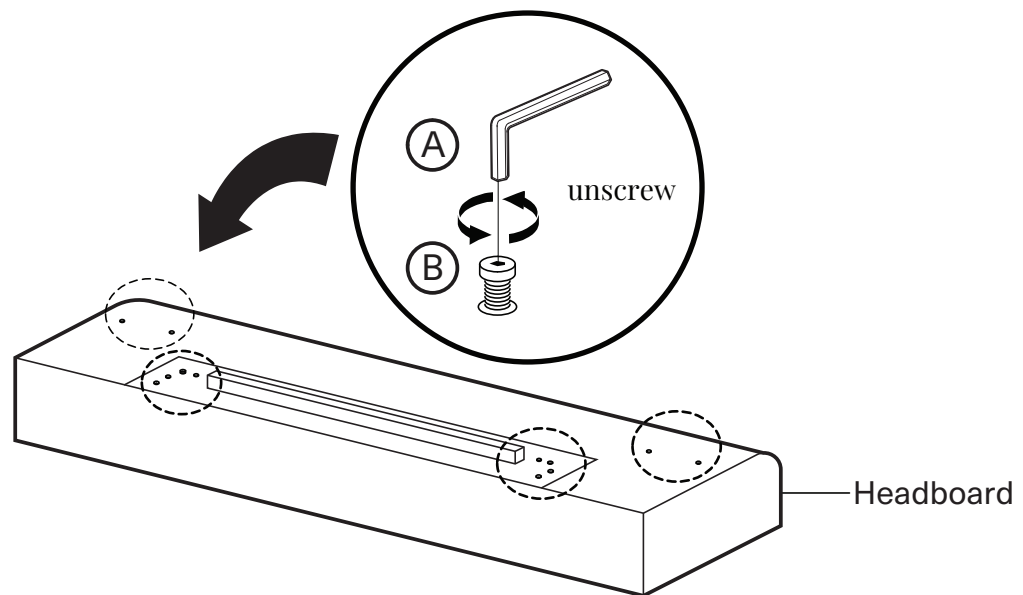

2

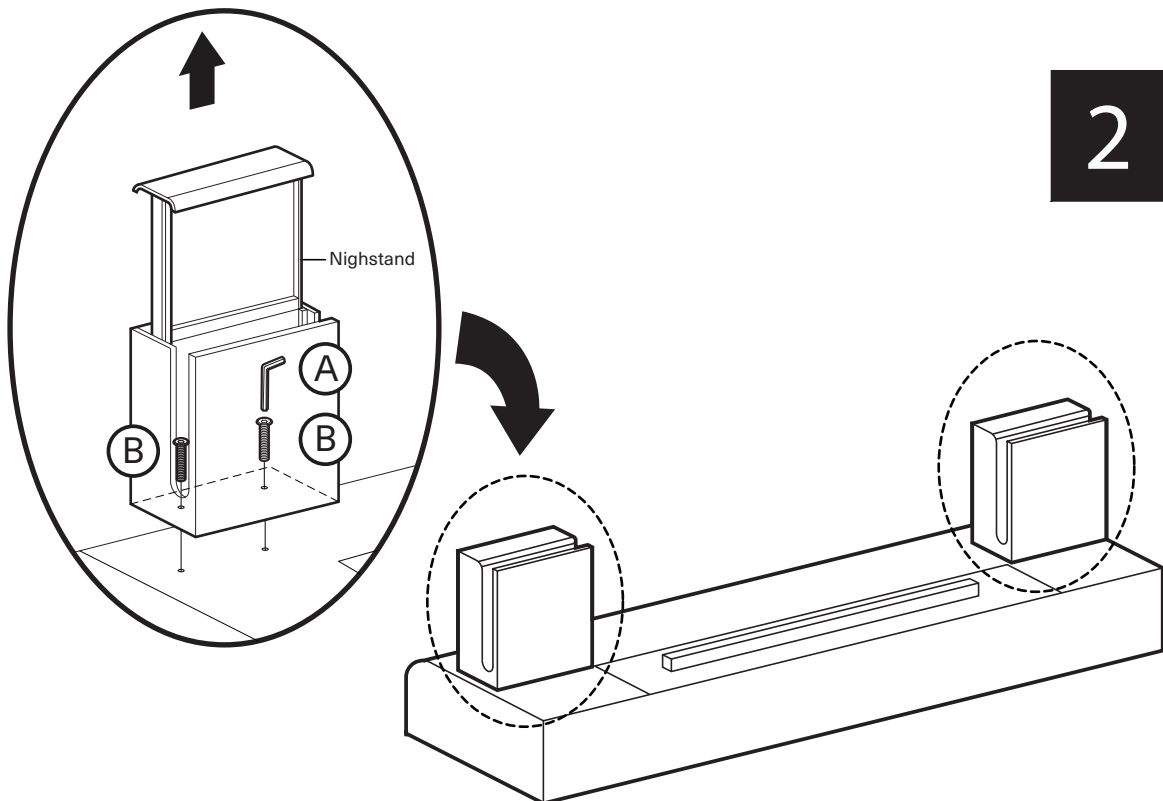


3

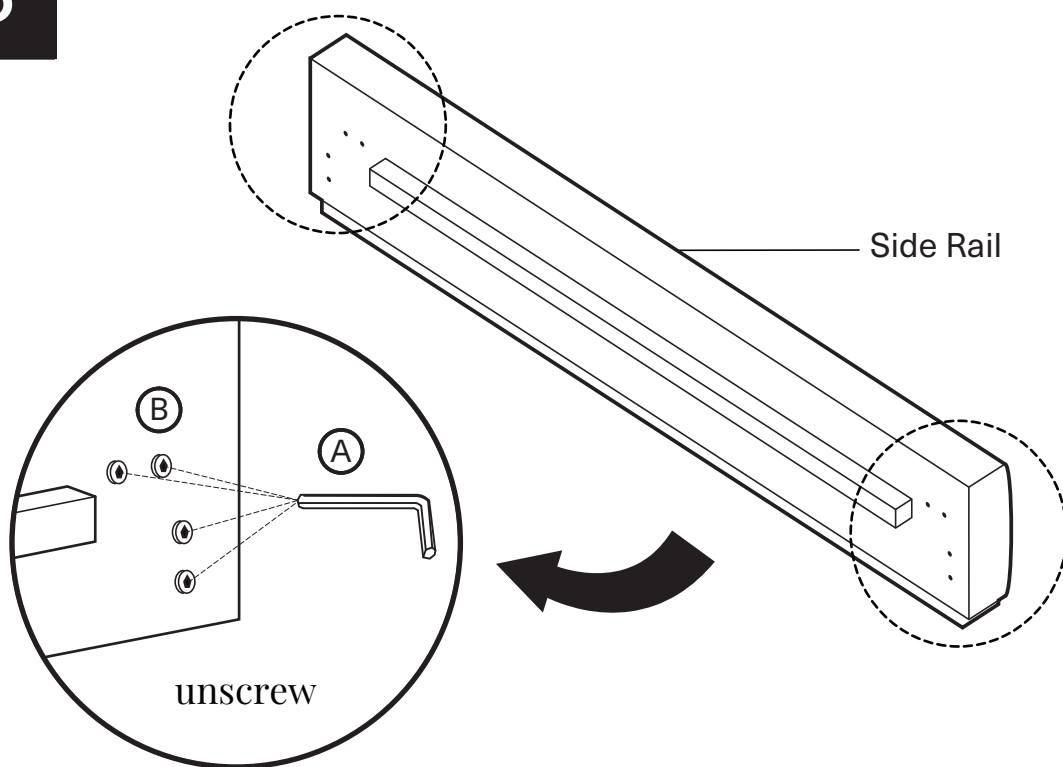


Footboard

4

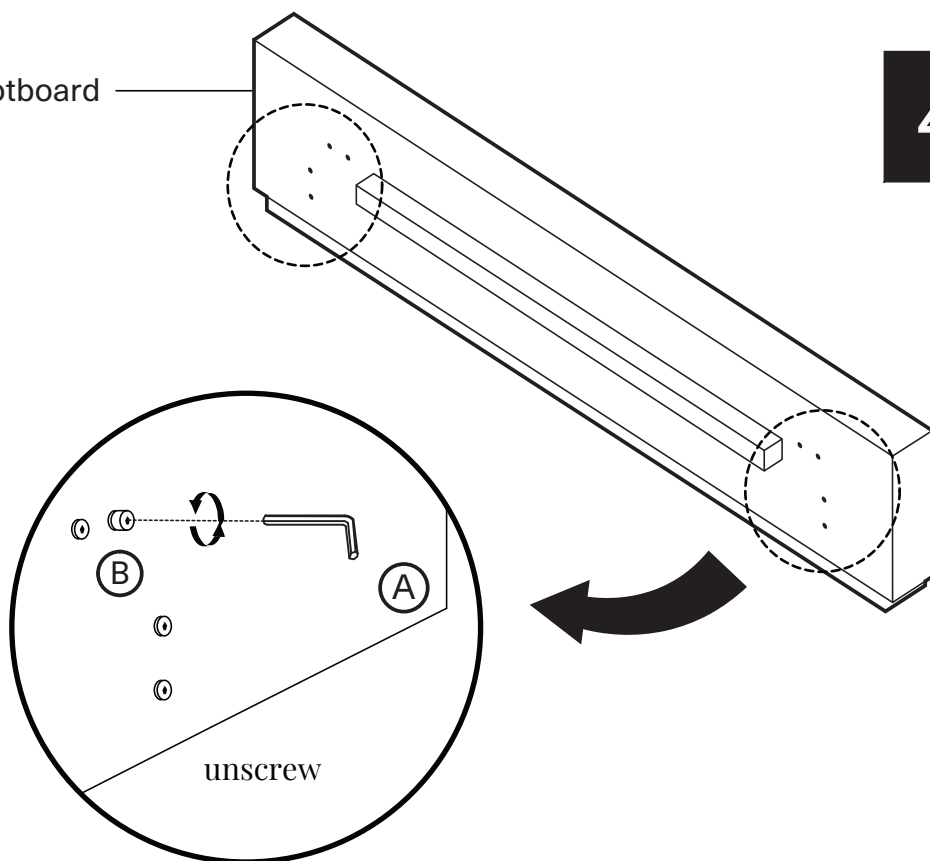


5

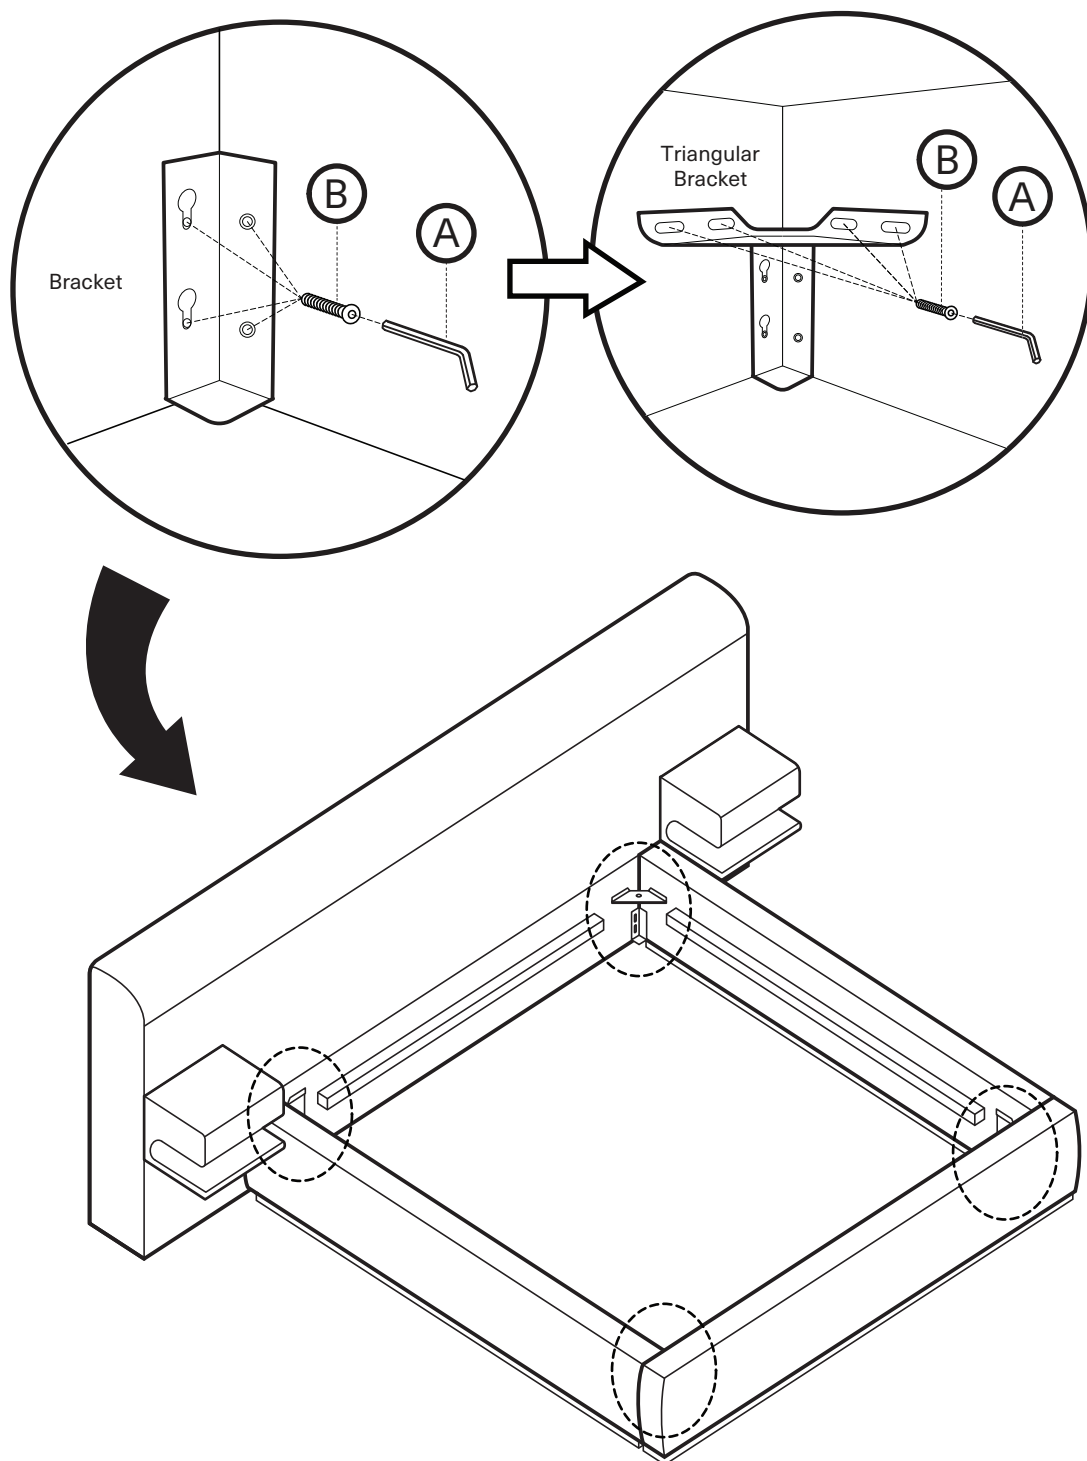


6


Bedstead

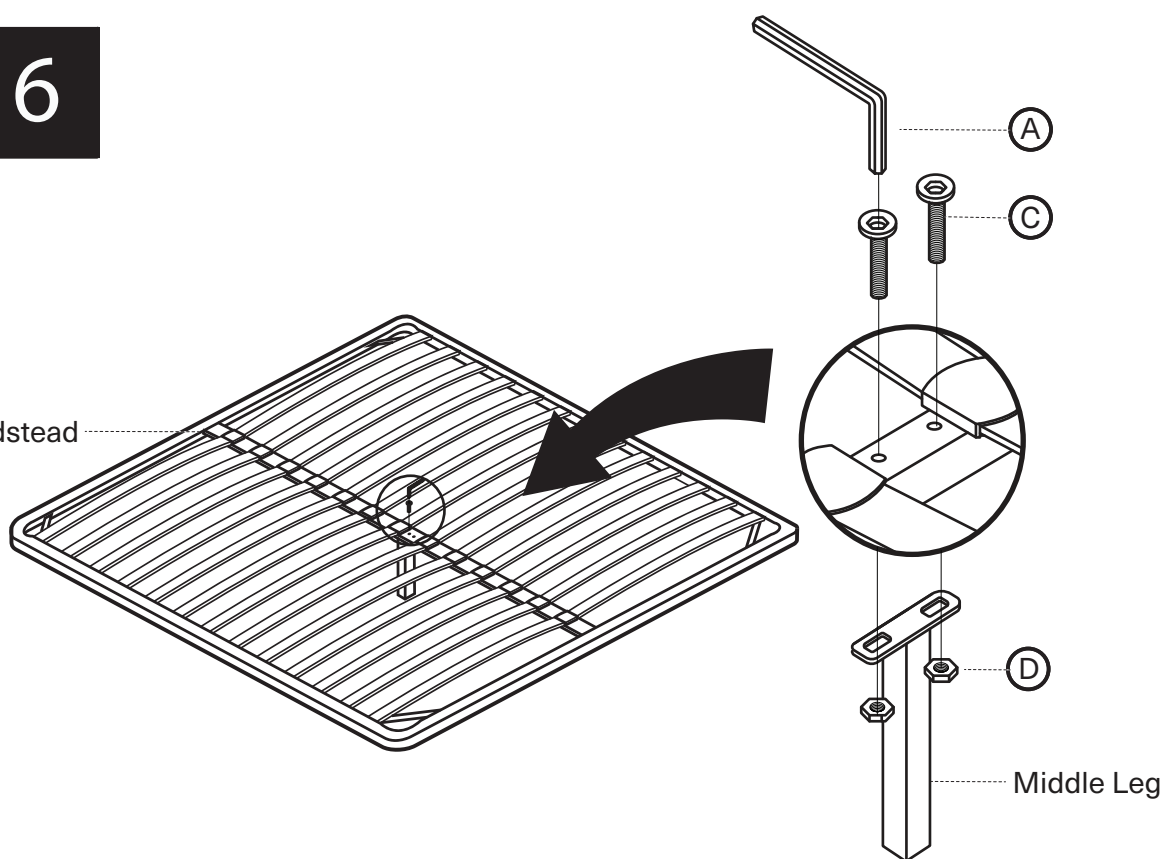

7

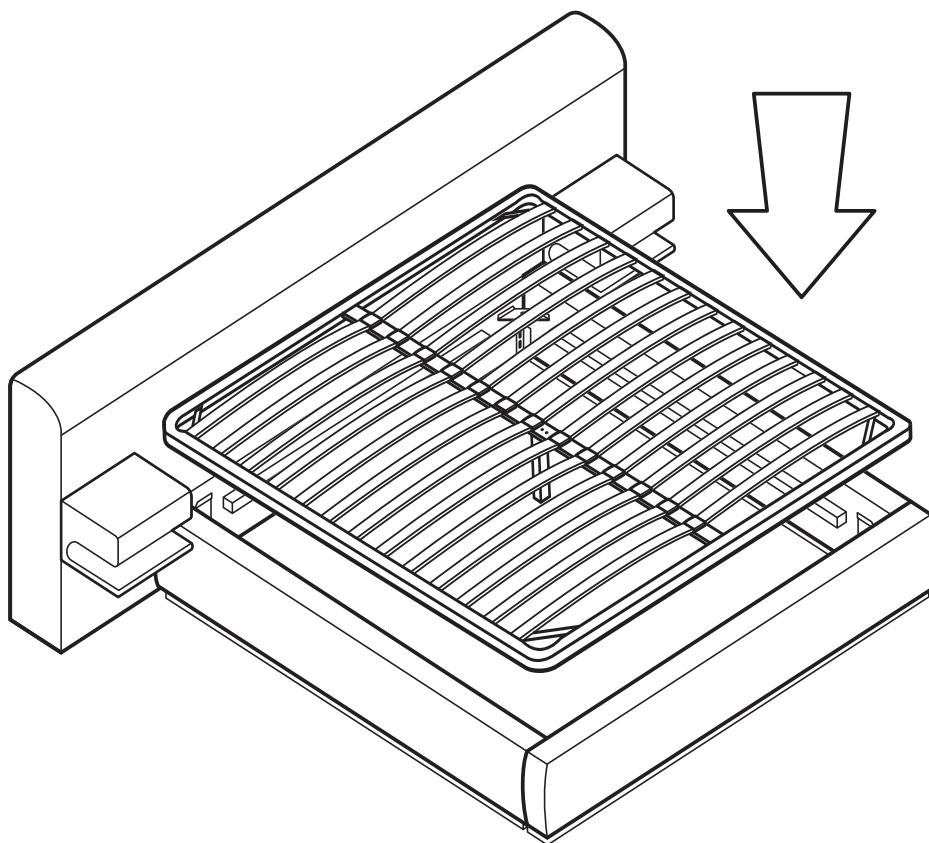

8

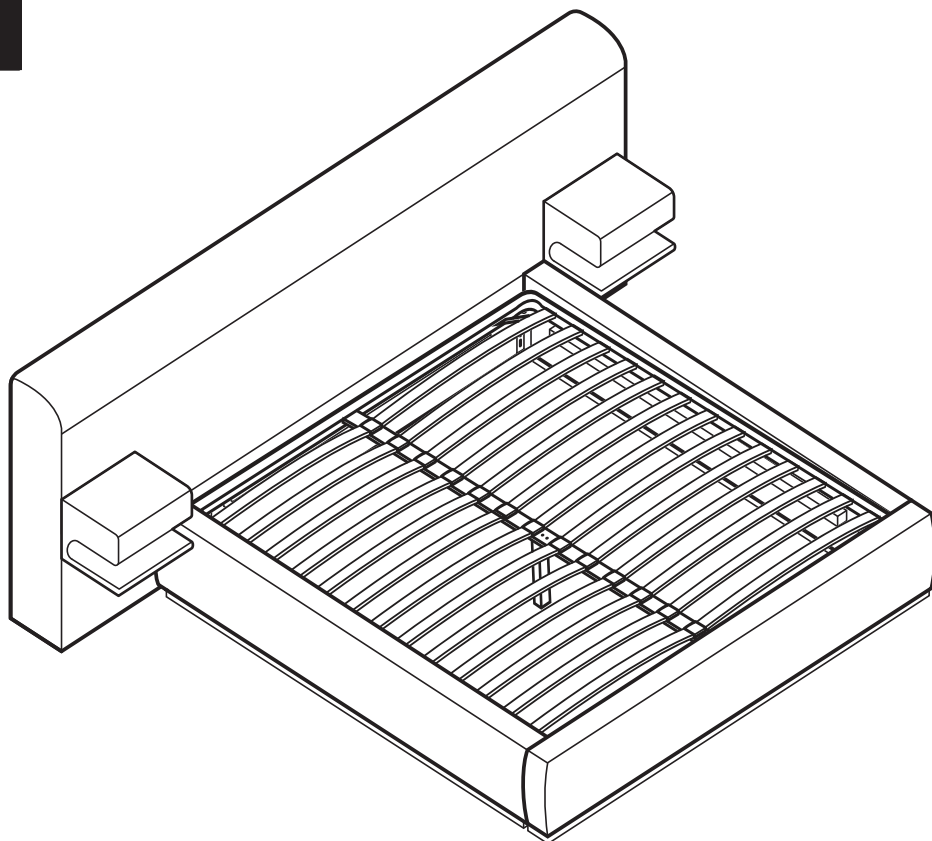

9

