

KOALA


L I V I N G

Assembly Instruction




Product Name: San Pierre Ebony Brown Ash Veneer Study Desk
Travertine Finish Sintered Stone Top
Product Id: 129688


Hardware List

A		Allen Key 5mm	1 pc
B		Allen Key 4mm	1 pc
C		Allen Bolt M6*50	8 pcs
D		Allen Bolt M6*35	2 pcs
E		Allen Bolt M8*30	8 pcs
F		Washer 8*19	8 pcs
G		Washer 8*13	10 pcs

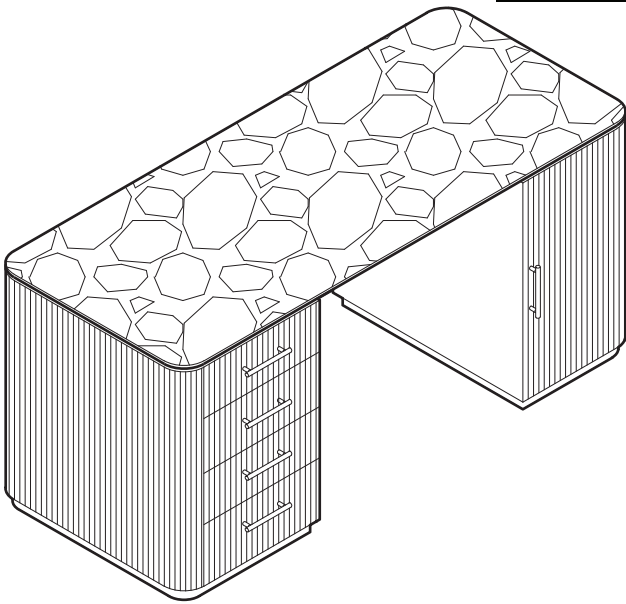

Part List

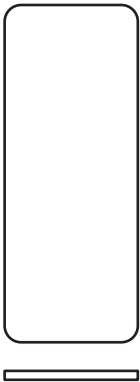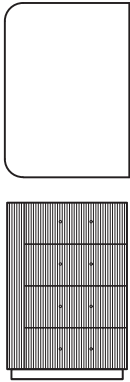
					
1 pc	1 pc	1 pc	1 pc	4 pcs	10 pcs

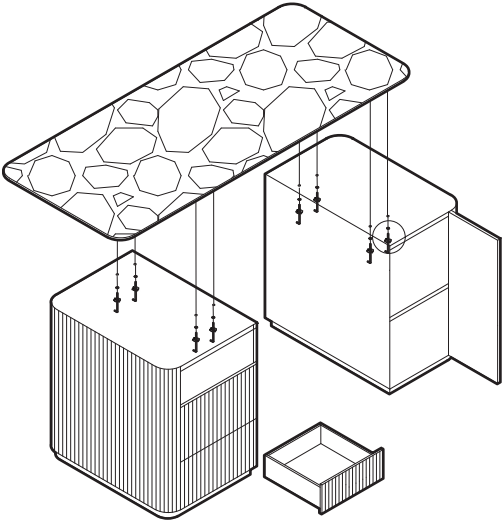


Note

1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.


1

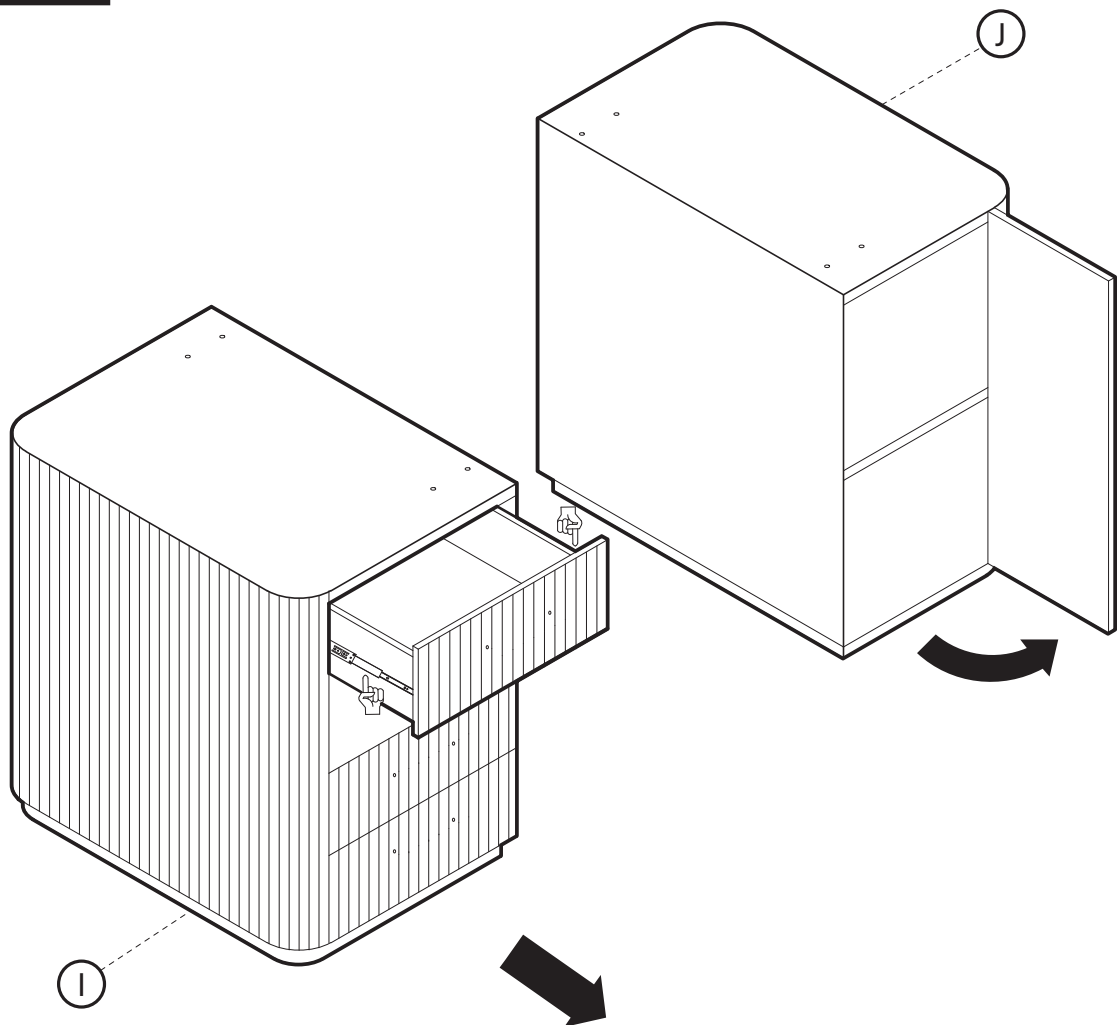


2

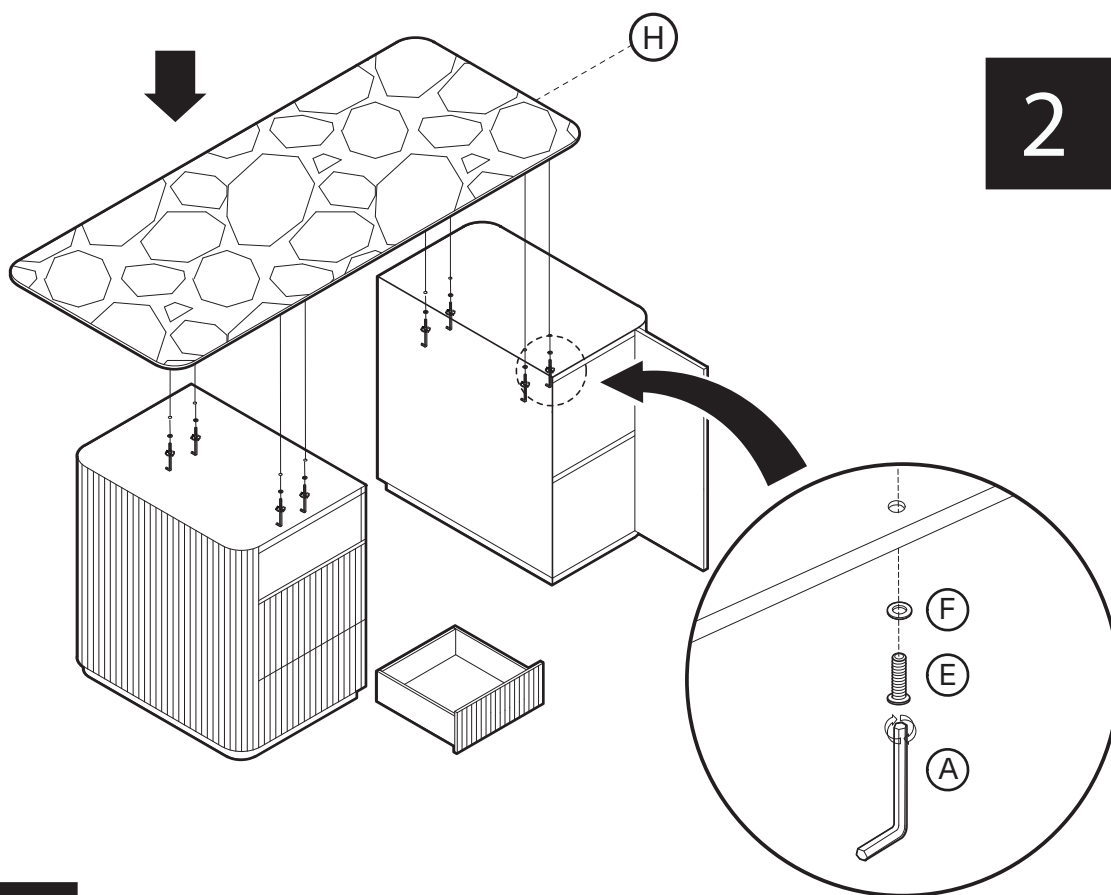

3

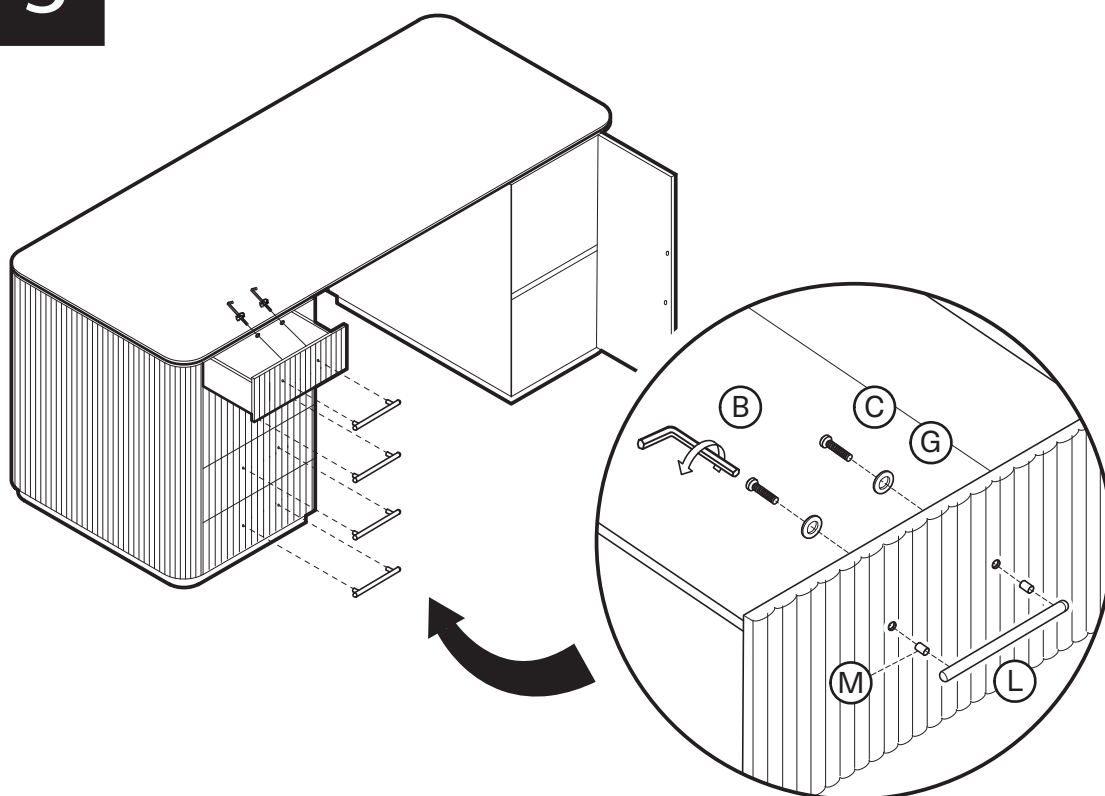

4

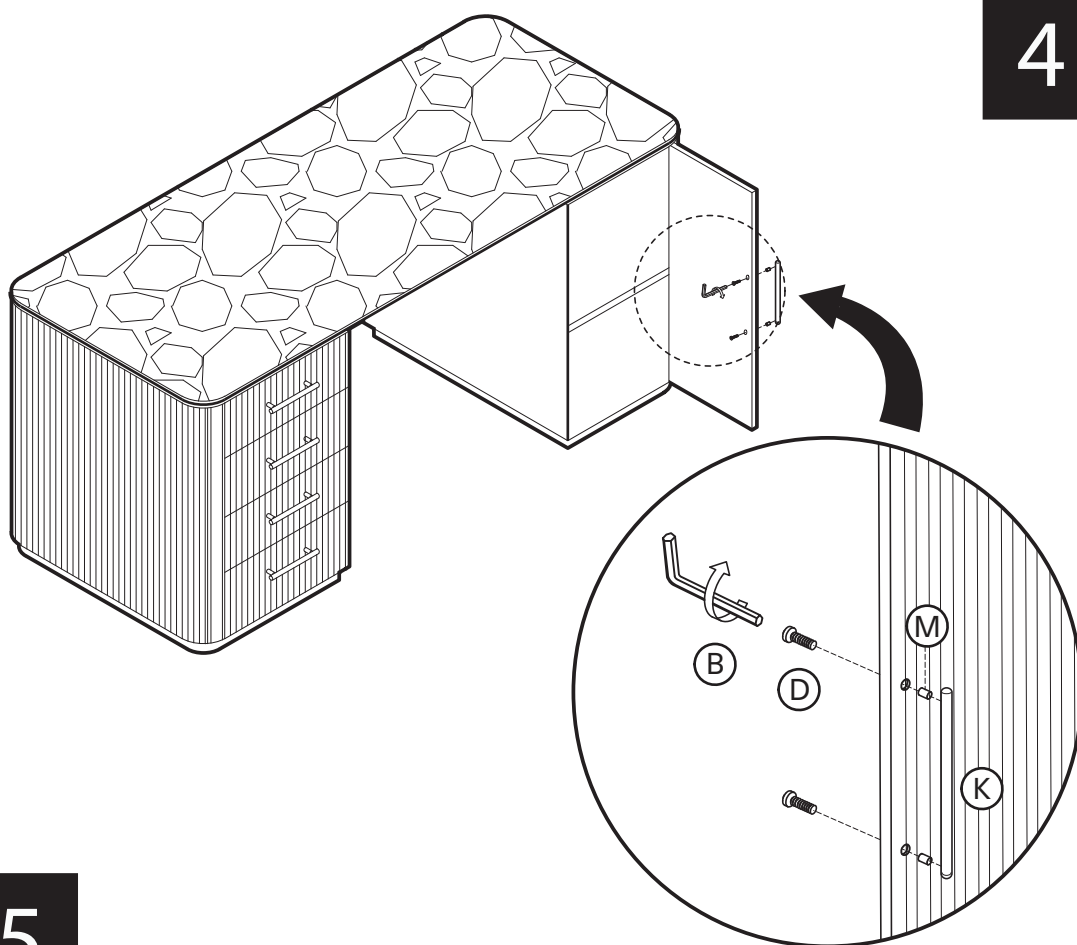

5

