



Assembly Instruction

Product Name: San Pierre Light Brown Ash King Single Bed

Product Id: 129995

Hardware List			
А		Allen Key 5mm	1 pc
В		Wrench 13#	1 pc
С	Jaman	Allen Bolt M8*100	4 pcs
D		Threaded Bolt M8*85	4 pcs
E	②	Nut M8	8 pcs
F		M8*Ø35	8 pcs
G	\bigcirc	Washer 8*17	12 pcs
н		Dowel Ø10*40	8 pcs
l	January	Allen Bolt M8*20	16 pcs
J		Triangular Bracket	4 pcs
K	P	Foot Stopper (Already Assembled)	11 pcs
L	0	Ø38	8 pcs

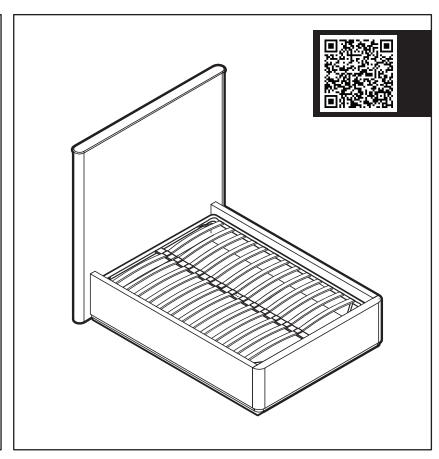

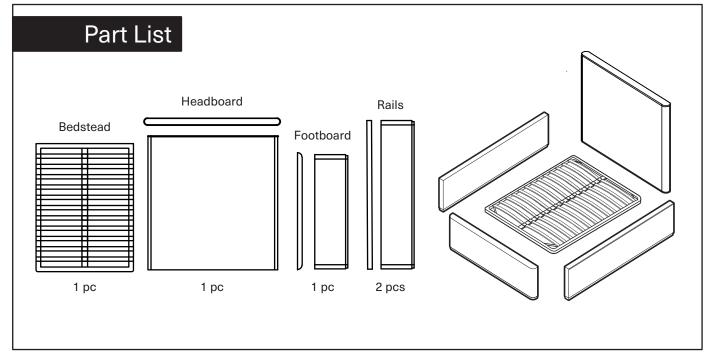

Note

- 1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
- 2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
- 3. Keep all packaging materials intact until assembly is complete.
- 4. Before assembling the item, carefully read all provided instructions.
- 5. Handle tools with care during assembly to prevent injuries.

