

KOALA

L I V I N G


Assembly Instruction

Product Name: San Pierre II Light Brown Ash Veneer High Cabinet


Product Id: 129927

Hardware List


A		Allen Key 5mm	1 pc
B		Allen Key 4mm	1 pc
C		Allen Bolt Ø8x40mm	2 pcs
D		Allen Bolt Ø6x40mm	4 pcs
E			2 pcs
F			4 pcs
G		(Already assembled)	4 pcs

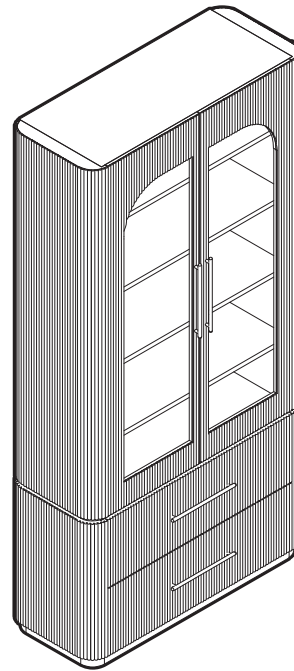

Part List

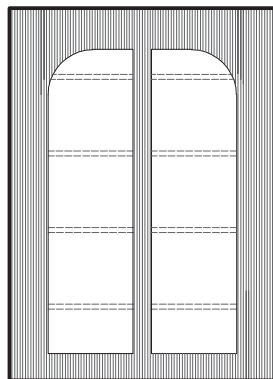

Top Cabinet
1 pc

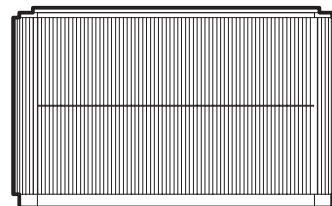



Bottom Cabinet
1 pc

Note


1. Assemble the item on a soft, well-lit surface like cardboard or carpet.
2. For safety and efficiency, it's best to have two or more people assist with assembly to handle heavy parts safely and collaborate effectively.
3. Keep all packaging materials intact until assembly is complete.
4. Before assembling the item, carefully read all provided instructions.
5. Handle tools with care during assembly to prevent injuries.

1

Open the drawer and
fix the screws

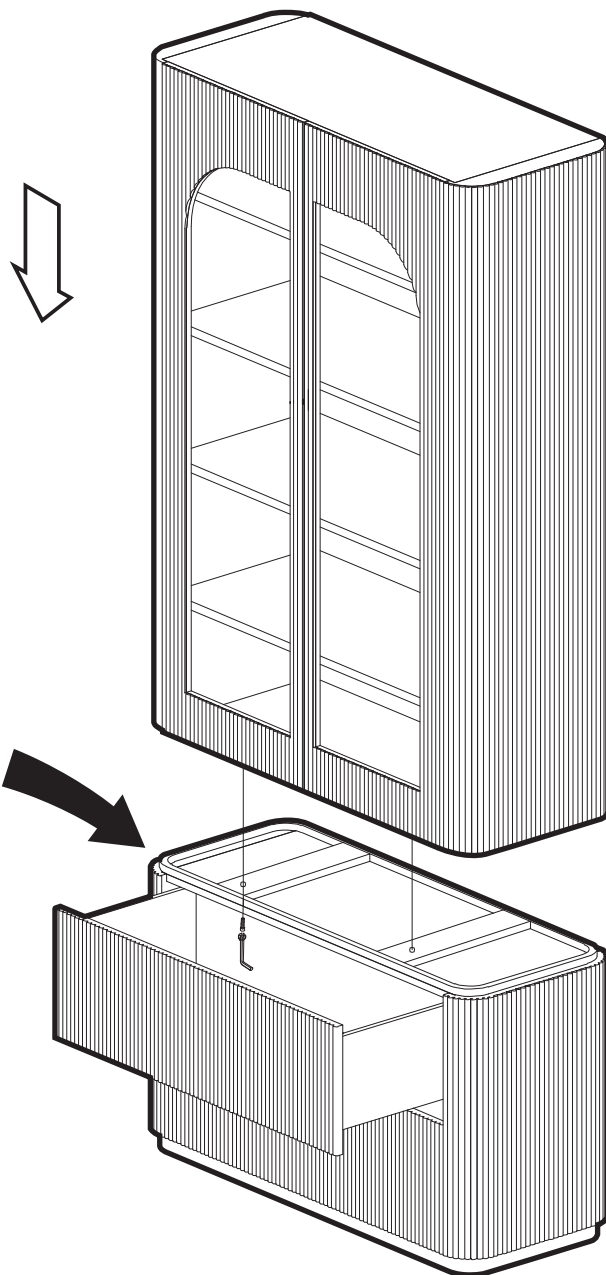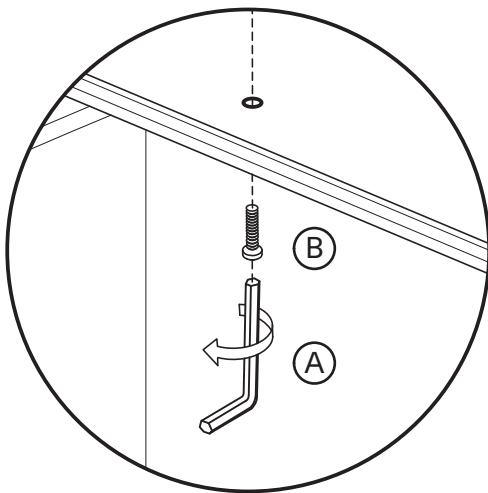


3

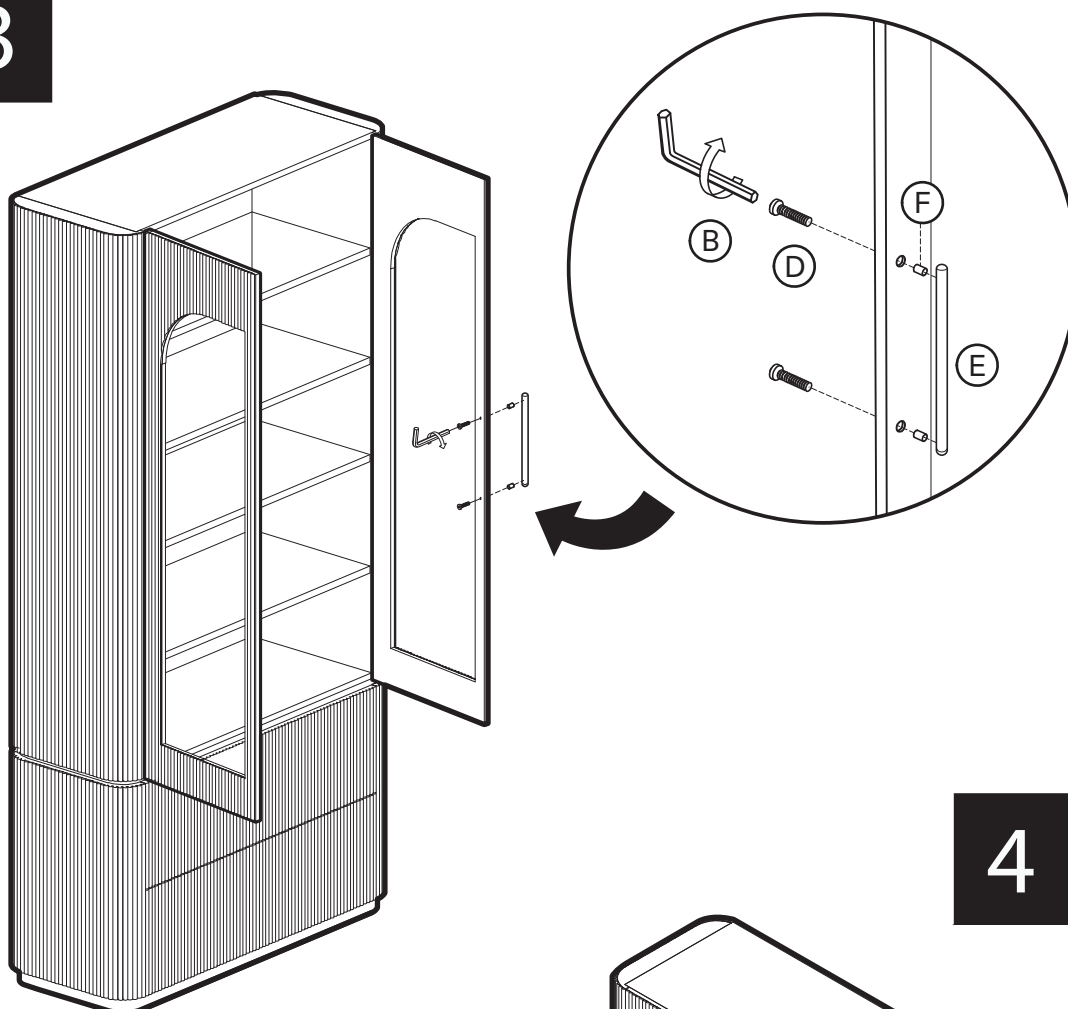


4


unscrew

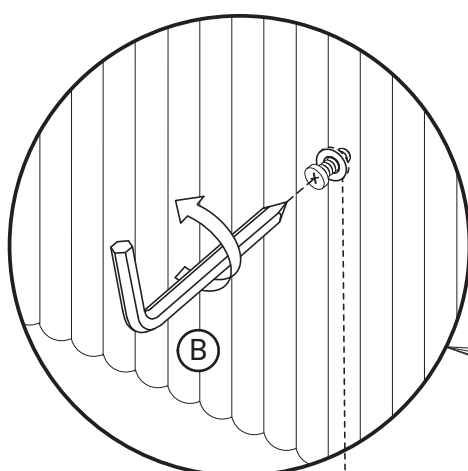


Please throw away this rubber piece.
Do not assemble this rubber piece.

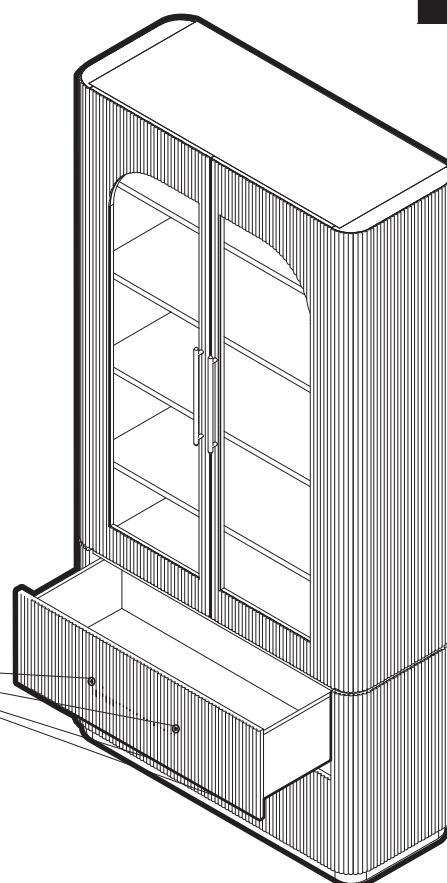


5

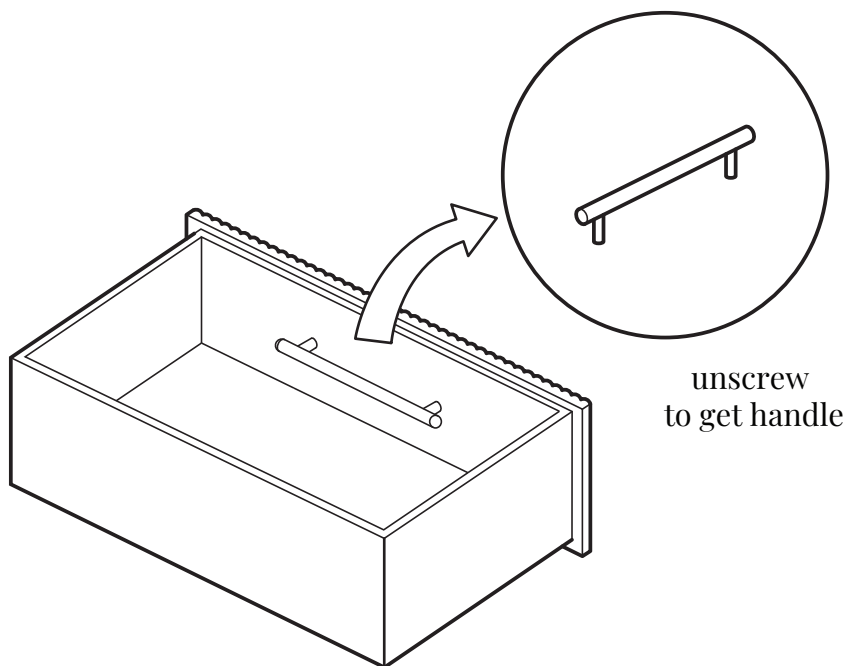

6

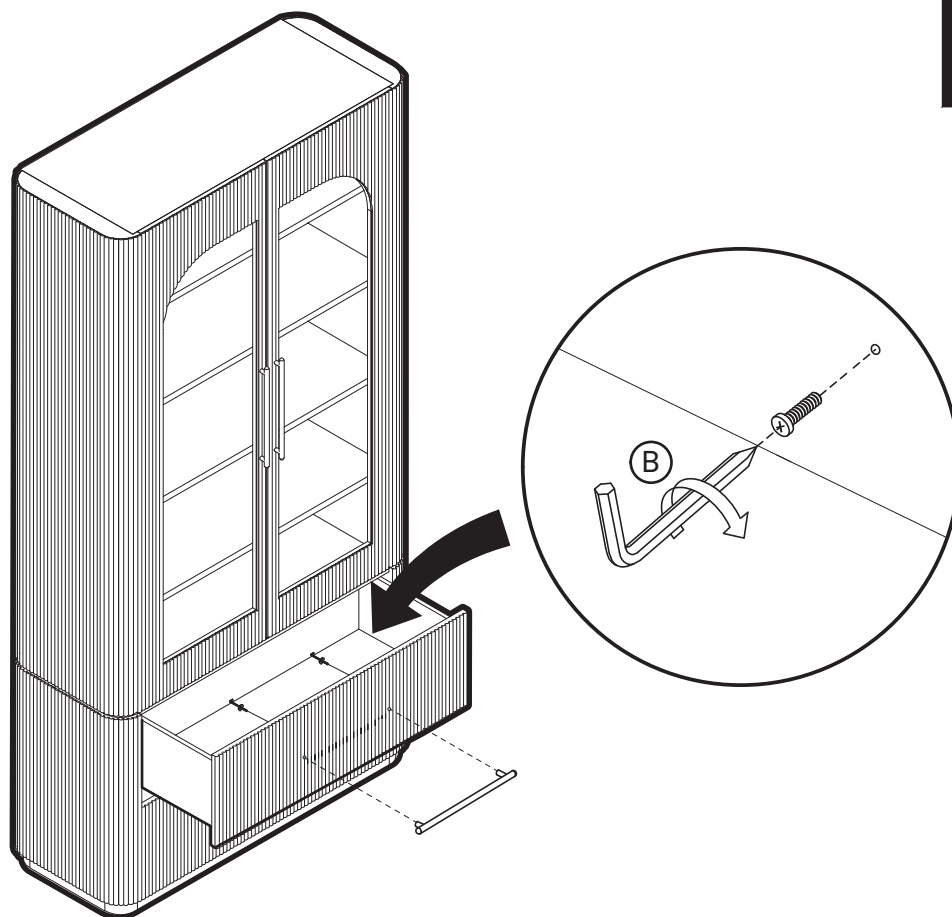


7

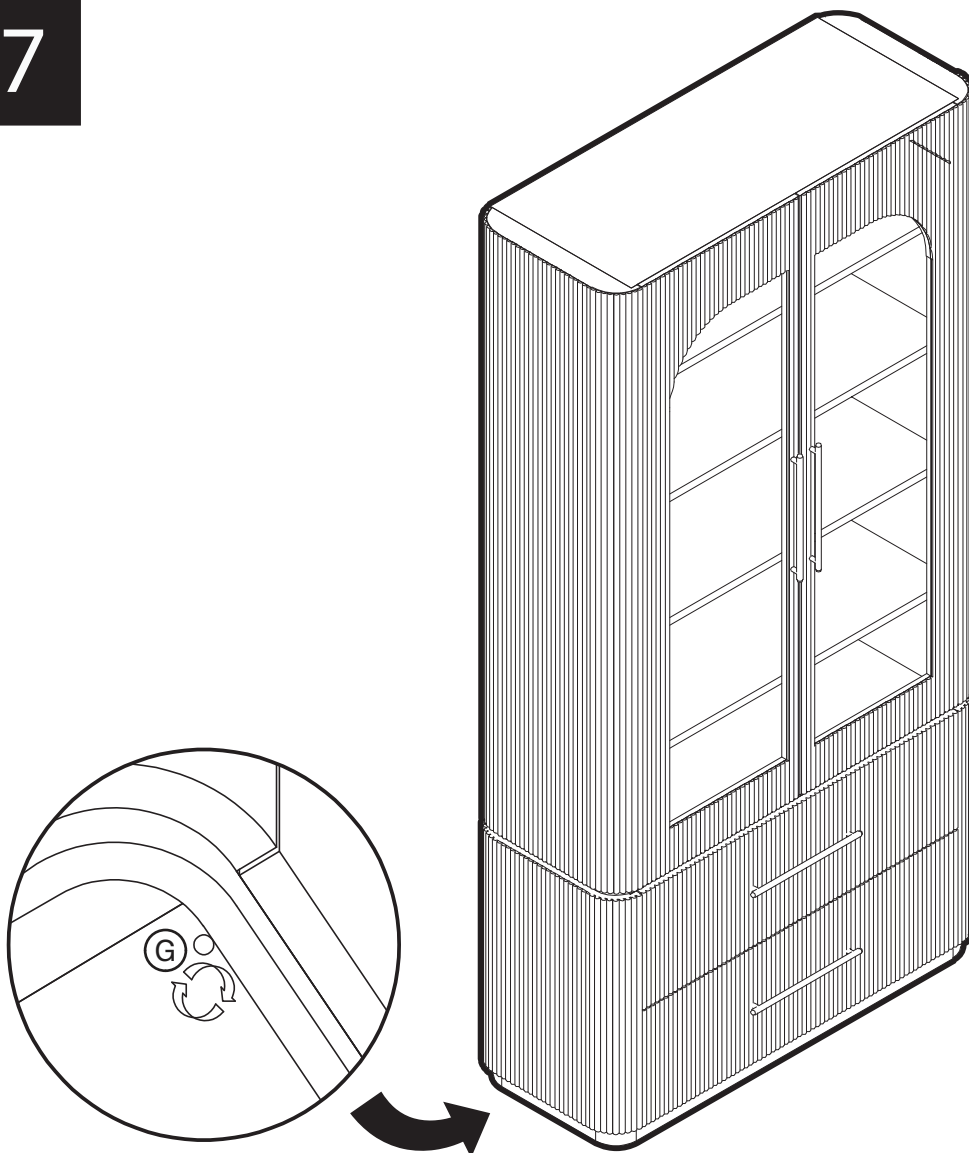


⚠ Warning

- ALWAYS secure this furniture with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves
- NEVER open more than one drawer at a time
- Place heavy items down low

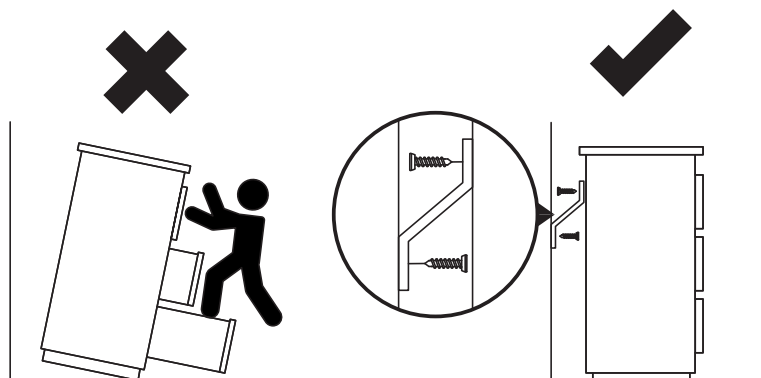

Anti-Tip Fixing Kit Assembly Instruction

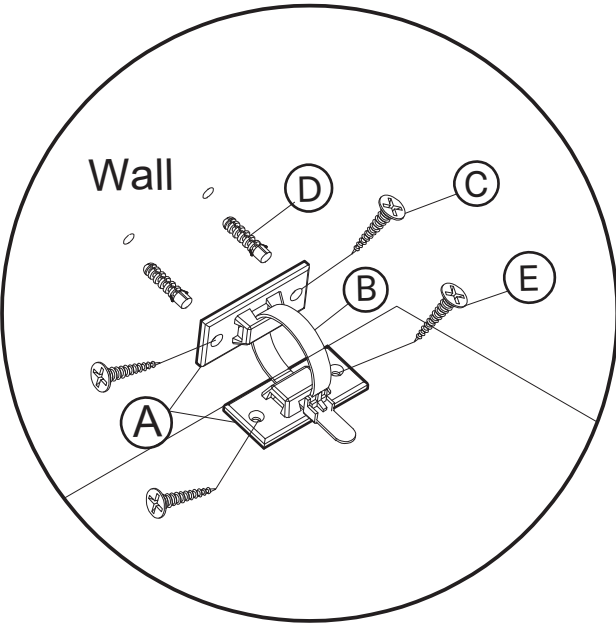

A			4PCS
B			2PCS
C		4x35	4PCS
D			4PCS
E		4x16	4PCS

